Kit Part Number: 700381

Breathe Safe Part of Aire Safe

Parts and Service Manual

CATERPILLAR 432 LOADER

HEPA H14 Variable Speed Pressuriser | INPRESS TS Cabin Display with CO2 Sensor | HEPA Return Air Filter

- 🖕 +61 7 3276 7833
- www.breathe-safe.com.au
- Sales@breathe-safe.com
- 62 Mica Street, Carole Park, 4300, QLD

Controlled Document: M0099

Issue Date: 04/09/23

Revision: 1

INSTALLATION

CONTENTS
Installation1
Safety 2
Critical Parts & Maintenance Schedule 3
Operator Guide4
Specifications - Pressuriser5
Parts List6-9
Technical Details 10-11
Smoke Emitter Cabin Pressure Leak Test 12
Cabin Sealing Test Pressure13
Commissioning Procedures14
Troubleshooting Guide15
User Settings Instructions 16-21
Data Download22-24
Warranty 25

CONTENT

INSTALLATION OVERVIEW				
Manufacturer	CATERPILLAR			
Туре	Loader			
Model	432			
Cabin Pressure Max				
Set Auto Cabin Pressure				





HEPA H14 Variable Speed Pressuriser



INPRESS TS Cabin Display with Data Recorder



HEPA Return Air Filter

SAFETY

WARNING

THE PRESSURISATION SYSTEM DESCRIBED IN THIS MANUAL HAS THE FOLLOWING AREAS WHICH MAY BE DANGEROUS IF NOT TREATED WITH GREAT CARE.

QUALIFIED STAFF MUST WEAR THE CORRECT PERSONAL PROTECTIVE EQUIPMENT WHEN CLEANING AND SERVICING THIS UNIT DUE TO DUST AND FIBRES WHICH MAY BE CAUGHT BY THE STAGES OF AIR FILTRATION DURING NORMAL UNIT OPERATION.

THE ELECTRICAL POWER SYSTEM IS SUPPLIED BY 12V DC OR 24V DC AND NO WORK SHOULD BE CARRIED OUT ON THE PRESSURISER SYSTEM WITHOUT THE CORRECT SAFE WORK PROCEDURES AND ELECTRICAL SAFETY MEASURES BEING TAKEN, AND ALL RELEVANT CIRCUIT BREAKER OPENED TO ISOLATE THE CIRCUIT.

THE AIR FILTRATION SYSTEM MAY HAVE SEVERAL TYPES OF HIGH-SPEED ROTATING EQUIPMENT INSTALLED WITH VERY SHARP EDGES. ENSURE ALL SAFETY GUARD ARE IN PLACE WHILE THE SYSTEM IS RUNNING.

Please be aware that HEPA filters cannot be cleaned and must be replaced at the end of their lifecycle or if filter media has been damaged.



Protective Clothing

Particulate Behaviour

This is the length of time it takes for a particle to drop from a height of 1.5m in **STILL** air.

20µm	10µm	5µm	2µm	1µm	0.5µm
3.6 mins	8.3 mins	35.7 mins	2.8 hrs	12 hrs	41.7 hrs
\bigcirc	0	•	•	•	۰

Warehouses and workshops do not have still air, so hazardous airborne particulates may remain in air for longer, increasing chance for workers to breathe in dust. Ensure PPE is worn when installing this system.



CRITICAL PARTS & MAINTENANCE SCHEDULE

Maintenance Schedule

The following tables show our suggested maintenance schedule for all units. Please note that site conditions may alter this. Excludes high corrosion environments.

Data download is required to claim the 3-year warranty on Brushless Blower Motor.

Inspect every 500 Hours and replace when filter is full*

Component / System	Action Required
Turbo Pre-cleaner	Check operation of the Turbo Pre- Cleaner.
Pressuriser Blower	Ensure blower is operational.
HEPA Primary Filter p/n: 500000	Inspect filter capacity indicator. Replace HEPA filter when 80% or greater. Vacuum out housing before replacing the filter elements.
HEPA Return Air Filter P/N: 500016	Vacuum inside cabin floor before replacing filter.
Filter Frame Assembly, Mounts, Seals and Filter Housing	Check door seals, all bolts, screws, and all mounts are secure. Check the filter canister & ensure it is correctly fitted. Check latches are operational and in good order. Replace / Re-tension fixtures and fittings required.

15,000 Hours / 36 months*

Component / System	Action Required
500 Hour Inspection	All 500-hour inspection actions.
Pressuriser's Blower 200002	Replace BRUSHLESS Pressuriser blower.

	Critical Parts					
Item	Part Number	Qty.	Description	Service Interval		
1	500000	1	Fresh Air HEPA H14 Filter (Tested as per EN1822)	1000* Hours (>80% fan capacity)		
2	500016	1	HEPA Return Air Filter	500* Hours		
3	200002	1	Brushless Blower Motor – 24V	15,000 Hours		
4	200027	1	BreatheSafe Digital Display – Data Recorder (INPRESS TS)			

*Filter service hours are subject to cab sealing efficiency, site conditions and correct system use.

Suggested Schedule Servicing*



Fan Capacity Indicator

The filter is serviceable if the motor capacity is between 10% & 80%. We recommend that the filter is changed if the capacity is over 80%.

*Site dependent

OPERATOR GUIDE

	OPERATORS CHECKLIST					
	PRE-START					
1.	Visually inspect the BreatheSafe system for any damage.					
2.	Visually inspect the cabin for any damage to doors, windows, seals.					
3.	3. Please remove dust & debris from shoes and clothes before entering the cabin.					
4.	4. Ensure door(s) and windows are closed correctly.					
5.	5. Start engine and turn HVAC on to speed 2 (medium speed).					
6.	6. After fixed speed delay, the BreatheSafe display will show 50 Pascals or pre-set value.					
The system is working correctly when the pascal value is green.						
>> There is no further action required <<						

NORMAL OPERATING CONDITION

Cab Air Conditioning

BreatheSafe recommends OEM air conditioning fan is set at mid speed or greater to circulate air around the breathing zone and minimise CO₂.

Acceptable operating range for BreatheSafe fan 10-80%. >80% recommend maintenance.

ALERTS

Fixed Fan Start Delay

• Allows the operator to carry out pre-start checks – limiting at 30% fan speed, press the red text to disable.

CO₂ Level Alert (if equipped)

• Ensure air conditioning fan is set at mid speed or greater to circulate air and minimise CO₂.

Low Pressure Alarm

- Cabin is not maintaining positive pressure check doors and windows are closed correctly.
- Refer to maintenance department to check filters and cabin sealing. Ensure filters are serviceable.

Check Filter

- Reminder to inspect or replace filter. Service hour meter requires re-set.
- Refer to maintenance department.





Specifications High-Capacity HEPA Pressuriser

Blower	: Brushless Blower P/N 200002.
Protection	: Locked Rotor Protection (Sub Zero Environments) Under Voltage, Under/Over Current & Over Temperature.
Voltage	: 24VDC.
Current Draw	: 11 amps (peak). *Note: Motor has slow start to stop excessive in-rush current.
Air Flow	: Up to 30-300 m ³ /h or 50-215 CFM.
Pre-cleaner	: Integrated VLR (Very Low Restriction). Turbo Pre-Cleaner.
Filter Element	: BreatheSafe HEPA Primary Filter (H14=99.99% MPPS) TESTED AS PER EN1822 – P/N 500000.
Plugs & Fittings	: Mining Spec. Deutsch electrical plugs as standard.
Construction	: High strength composite construction.
Serviceability	: Easy access HEPA filter with twist-lock (TL) dust cap single assembly.
Mounting	: Heavy Duty adjustable mounting brackets.
Design	: Fully designed in SolidWorks 3D CAD & Ansys Engineering Simulation Software.
FEA Testing	: Critical components FEA (Finite Element Analyst) tested in Solid Works Simulation.
CFD Testing	: CFD (Computational Fluid Dynamics) simulations in Flow Works to ensure optimum air flow through the system.

SPECIFICATIONS HIGH-CAPACITY HEPA PRESSURISER

	List of Abbreviations		
DH	Dual HEPA		
DHPR	Dual HEPA Powered Recirculation		
DHAC	Dual HEPA Activated Carbon		
DHACPR	Dual HEPA Activated Carbon Powered Recirculation		
СРМ	Cabin Pressure Monitor		
CPU	Central Processing Unit		
DB	Decibel Sensor		
DPM	Diesel Particulate Matter		
GAS	Gas Sensor		
HEPA	High-Efficiency Particulate Air Filter		
HPAFU	High Pressure Air Filtration Unit		
HRAF	HEPA Return Air Filter		
HVAC	Heating Ventilation and Air Conditioning		
MAF	Mass Air Flow		
OEM	Original Equipment Manufacturer		
PM	Particulate Mass		
RH	Relative Humidity		
TEMP	Temperature		
TS	Touch screen		
UI	User Interface		
VMS	Vehicle Monitoring System		
VS	Vibration Sensor		
OGSP	OnGuard Sensor Pod		
CO2s	CO2 Sensor INPRESS TS		

Breathe Safe Part of Air Safe

Item No.	Qty.	Description	Part No.
1	1	Pre-cleaner Hood & Rotor Assy	200004
2	4	Pre-cleaner Injector Ring	200005
3	1	TL Fan Blade (inc. in #7)	200006
4	1	TL Nose Cone / Pre-cleaner	200007
5	1	TL Motor Housing	200008
6	1	TL Filter Housing	200009
7	1	24v DC Brushless VSD Motor & TL Fan Blade	200002
8	1	O Ring Seal Kit 2 Parts	200010
9	1	Included in 8	200011
10	1	Wiring Sleeve	200012
11	1	HEPA H14 Filter	500000
12	3	M6 Nyloc Nut	300218 (M6NYL)
13	3	M6 x 55mm Hex Bolt	300982 (M655B)
14	4	M8 x 190 Hex Bolt	301136 (M8190B)
15	8	M8 x 22mm O/D HD Washer	300230 (M8222HTW)
16	4	M8 Nyloc Nut 300249 (M8N	
17	5	M4 x 75mm Pan Head Phillips Screw 300162 (M475P	

PARTS LIST – TL4 24V DC PRESSURISER UNIT

PRESSURISER ASSEMBLY No: 200000



Item No.	Part No.	Rev	Description	Qty	Colour	Category
1	13453	1	TL Mount Assy	1	New Cat Yellow 98489749	Weld Assy
2	13454	0	Locting Plate Assy	1	Caterpillar Yellow	Weld Assy
3	13455	0	R.A.F. Main Assy	1	Black Satin 27219268	R.A.F. Frame
4	13461	0	Mounting Plate	1	Caterpillar Yellow	Part
5	13464	0	Stauff Clamp Brkt.	1	Caterpillar Yellow	Part
6	13460	0	Stauff Clamp Spacer	1	Black Satin 27219268	Part
7	17098	0	Monitor Box Mounting Bracket	1	Black Satin 27219268	Part
8	08007	1	Fresh Air Thru-Wall Spigot Assy	1	Black Satin 27219268	Weld Assy
9	300388-0300	-	76 SS Tube @300L	1	(As Req'd)	Pipework
10	300388-0200	-	76 SS Tube @200L	1	(As Req'd)	Pipework
11	300388-0150	-	76 SS Tube @150L	2	(As Req'd)	Pipework
12	300388-0070	-	76 SS Tube @70L	1	(As Req'd)	Pipework
13	200306	-	Ø76.2 x 45SD Elb	1	-	Pipework
14	200308	-	Ø76.2 x 90SD Elb	3	-	Pipework
15	300481	-	Stauff GR7 Cover Plate	1	(As Req'd)	Pipework
16	300483	-	Stauff GR7 Weld Plate	1	(As Req'd)	Pipework
17	300480	-	Stauff Shell GR7 76.1 Black	4	-	Pipework
18	300848	-	Ø76.2 Cobra Neck	1	-	Pipework
19	200272-0600	-	76 ID Silicone Flexi Hose @600L	1	-	Pipework
20	300850	-	76 ID Silicone Hose @110L	1	-	Pipework
21	300852	-	76 ID Silicone Hose @58L	1	-	Pipework
22	13472	0	TL Bracket	1	Black Satin 27219268	Part
23	200001	[*]	HEPAFU 12VDC VSD TL2	1	-	Stock Item
24	250044	[*]	TL Water Cannon Guard	1	(As Req'd)	Stock Item
25	250100	[*]	Monitor Box Small	1	(As Req'd)	Stock Item
26	250106	[*]	CO2 Brket Universal	1	(As Req'd)	Stock Item


PARTS LIST GA

Part of Aire Safe

COMPLETE ASSEMBLY No: 700381

Breathe Safe


Kit Part Number: 700381

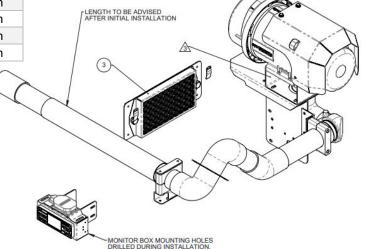

Breathe	Safe
Part of	Aire Safe

Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour
1	13456	0	R.A.F. Base Assy	1	(Prt Dwgs)	(Prt Dwgs)	Satin Black MX88-124
2	13457	0	Black Clamp Assy	2	(Prt Dwgs)	(Prt Dwgs)	Satin Black MX88-124
3	13470	0	Filter Frame	1	Zan	1.6mm	(Per Assy)
4	13471	0	R.A.F. Front Clamp	2	Zan	1.5	Satin Black MX88-124
5	500016	0	HEPA Filter 285x165x31	1	-	1.6	N/A
6	300814	0	M6 x 20 Male Scallop K	2	-	-	-

PARTS LIST – RETURN AIR MODULE

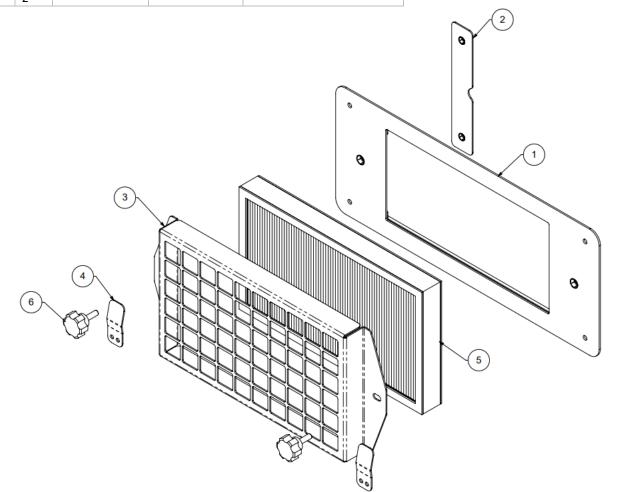

2

0

0

Breath	Safe
Part	t of Aire Safe

Item No.	Part No.	Rev	Description	Qty	Colour	Category
1	250101	[*]	STD Large Monitor Box	1	-	Stock Item
2	200027	N/A	INPRESS TS Controller CO2 Sensor	1	-	Stock Item
3	200031	N/A	CO2 Sensor Suit 200027	1	-	Stock Item


PARTS LIST – MONITOR MOUNT

TECHNICAL DETAILS

Display Key Features

- Digital cabin pressure monitoring system
- Automatic cabin pressure control
- Intelligent fan speed output
- Data logger
- Alarm for low-pressure (RS20)
- Light sensor for automatic dimming of the screen



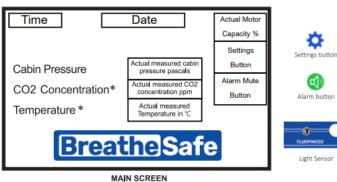


Options* when fitted

CO2 Sensor


- CO2 Sensor Type is NDIR (Non-Dispersive Infrared)
- Sample Rate is every 2 seconds
- 12-30V DC Operating Voltage
- Automatic Altitude Compensation
- Alarm Set points are adjustable
- No setup required



Connections: 200027

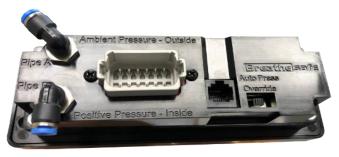


Item	Destination
1	PIPE A – AMBIENT PRESSURE – OUTSIDE
2	PIPE B – POSITIVE PRESSURE – INSIDE
3	RJ45 CONNECTOR – CO2 SENSOR
4	OVERRIDE TOGGLE SW = MAX SPEED

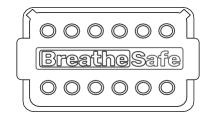

Item	Destination
1	12/24 VOLT POSITIVE SUPPLY
2	CAN H OPTION
3	CAN L OPTION
4	SERIAL TRANSMIT RS232
5	MOTOR CONTROL VOLTS OUT
6	ALARM + OUTPUT
7	TEMP SENSOR
8	NO CONNECTION
9	SERIAL RECEIVE RS232
10	DOOR INPUT (+)
11	WINDOW INPUT (+)
12	OV NEGATIVE GROUND

Wiring Diagram

INPRESS User Interface (UI)

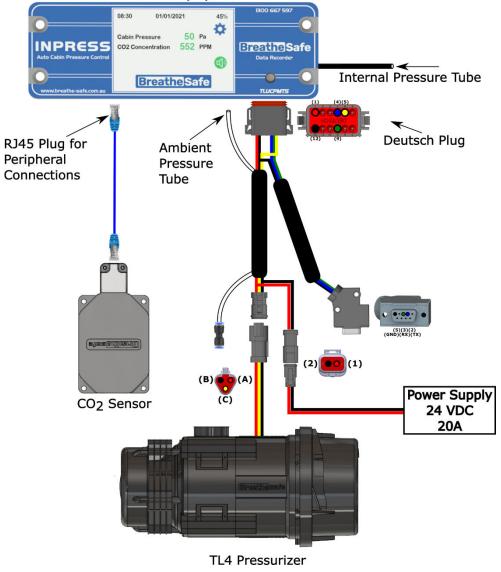

TECHNICAL DETAILS

Breathe Safe Part of All Safe

* Do not handle until MSDS & all safety precautions have been read and understood. Use personal protective equipment as required.

Before use, carefully read the product label. Safe work practices are advised to avoid eye or skin contact and inhalation. Observe good personal hygiene, including washing hands before eating. Prohibit eating, drinking, and smoking in contaminated areas. Avoid inhalation. Mechanical extraction ventilation is recommended when the removal of atmospheric contaminants is required. Maintain dust / fume levels below the recommended exposure standard. For small amounts, absorb with sand, vermiculite or similar and dispose of at an approved landfill site.

WARNING

For Professional Use Only – keep out of reach of children.

Do not ignite near or around flammable materials.

Use only in well-ventilated areas, outdoors, and/or with proper respiratory protection.

Persons with respiratory sensitivity should avoid exposure to any smoke.

Concentrated smoke may cause severe burns to the skin, eyes, or respiratory system.

Improper use may result in sufficient inhalation of smoke to cause respiratory tract irritation and lung damage. Harmful if swallowed.

DANGER

Use only as directed. Do not handle until all safety precautions, including Safety Data Sheet, have been read and understood. The product contains hexachloroethane. Wear protective clothing. If exposed or concerned, get medical advice. Store in a cool, dry, secure location. KEEP OUT OF REACH OF CHILDREN. Dispose of contents/container per location regulations. When used as directed, exposure should be limited and usually poses no hazard because the hexachloroethane is consumed inside the tube as smoke is produced.

Directions: (Smoke Bomb)


- 1. Ensure other workers in close proximity are informed of use. Place on a non-combustible container, away from flammable materials.
- 2. Place at Blower intake, or upwind of target area, or near centre of space.
- 3. Orient "Smoke Issues Here" toward air stream, away from surfaces. Place candle on a flame / heat resistance plate if not it will melt into the plastic surface.
- 4. Ensure smoke will not create any hazard where it is anticipated to go.
- 5. Ignite emitter inside the cabin using site approved device i.e., solder torch or 'lighter' and conduct smoke test.
- 6. Do not touch or hold smoke generator after ignition item becomes very hot & remains hot after use.

Smoke Emitter Cabin Pressure Leak Test

- 1. The pressuriser system is switched on (TEST MODE).
- 2. Hold the smoke emitter angled down.
- 3. Ignite emitter using site approved ignitor i.e., solder torch or 'lighter'.
- 4. When the product ignites, remove the lighter.
- 5. If the product flames up, blow out the flame.
- 6. Place the emitter in a non-flammable container and place it inside the cabin at floor level and close the door/windows.
- 7. Observe smoke leaks to indicate worn-out or broken seal locations. Check leakage points outside the cabin.
- 8. Do not come into contact with or inhale smoke haze.
- 9. Wait until the smoke haze **completely** disperses before re-entering the cabin. Open door to allow sufficient ventilation of smoke prior to entering cabin.

SMOKE EMITTER CABIN PRESSURE LEAK TEST


Link to MSDS: SMOKE GENERATOR TQ7621AT30S.pdf

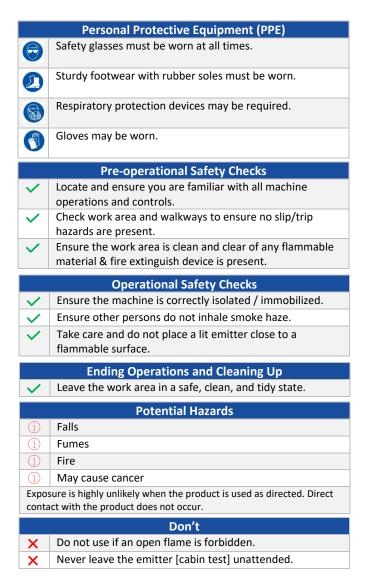

*This SWP does not necessarily cover all possible hazards associated with this equipment and should be used in conjunction with other references. It is designed as a guide to be used to compliment training and as a reminder to users prior to equipment use.

CABIN SEALING TEST PROCEDURE

	Cabin Sealing Efficiency Test Procedure				
1	Start Engine – Pressuriser System is ON				
2	Ensure all windows & door(s) are CLOSED correctly (no cabin pressure leaks) NOTE: for a new cabin with effective seals, you may need to open a window slightly before closing the door to bleed the static cabin air pressure outwards. Once door is fully closed then close windows to begin testing.				
3	Enter the Settings menu via the touch screen button.				
4	Select and press the System Check button to go to System Test – Max Fan.				
5	Record / photograph the maximum cabin pressure achieved.				

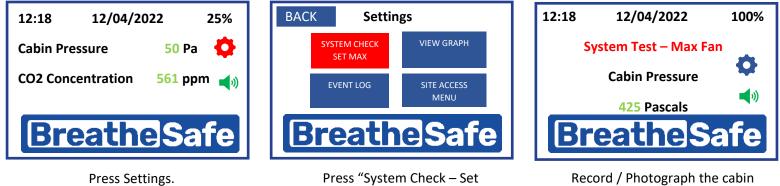

Max" box.

Record / Photograph the cabin pressure result (Max Fan Speed).

Commissioning Procedures

COMMISSIONING PROCEDURES – CABIN PRESSURISER


Follow each step of the installation guide that was supplied with the BreatheSafe kit.

Cabin sealing is an integral part of RS20 & ISO 23875; you must ensure that cabin seals are adequate for maintaining positive pressure. In addition, the site (end- user) must have the correct procedure(s) for servicing OPERATOR enclosure seals in a proactive manner rather than reactive. Items such as door and window seals must be in good working order or new seals FITTED before the BreatheSafe system installation.

Touch-screen cabin pressure display/controller Part# 200027:

*System Check Function: enter the Settings menu option and select "System Check – Set Max." The minimum BreatheSafe requirement for cabin sealing efficiency is 250 pascals; if this result is not met, it is essential to re-examine and find pressure leaks of the enclosure and apply new sealing measures.

Submission for commissioning procedure as per the diagram below:

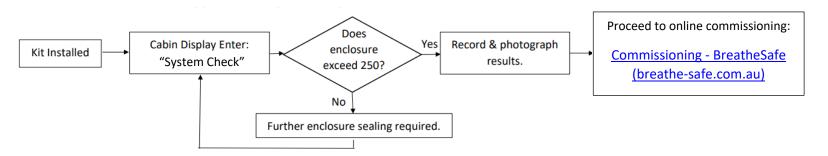

The commissioning images required are:

- ID plate / Machine Serial Number / Asset Number or Call Sign
- INPRESS TL Pressuriser location
- HEPA Return Air Filter Location Option: Powered Return Air Filter
- Cabin Pressure Display Location Including the "System Check" maximum cabin pressure result with motor output capacity %

Fill in the BreatheSafe Service Tag with the following details:

- Machine Serial Number and Installers details
- Date installed and System Check result (max cabin pressure)
- The set cabin pressure with actual pressure and motor percentage output
- Verify the 250-pascal threshold was achieved = pass OR not achieved = fail**

Please upload machine and installation details in conjunction with the required images. A Commissioning Certificate will be sent to the email address you nominate. **Extended warranty for (RS20 & ISO 23875) BreatheSafe Systems is only applicable to operator enclosures meeting this requirement.





CATERPILLAR

432 Loader




AULT	POSSIBLE CAUSE	SOLUTION		
*ERR error code	Poor sensor connection	Remove & refit pod connection cable		
	Corrupted coding	Access factory setup - default reset - pin 6759		
*Check filter alarm	Service hour timeout	Access Check Runtime menu - reset hours via 7597 code		
Temperature / CO2 error	Sensor not connected	Fit sensor or disable via site access CO2 & or temperature menu		
Pressuriser running at full speed/noisy	Filter blocked	Service filter		
	Door or window open	Ensure doors & windows securely shut		
	Cabin sealing capacity not adequate	Perform pressure test procedure & seal leak points as required		
	Sense pipe blocked	Ensure clear & not bent		
	Internal sensor damaged	Replace controller		
		**No need to change setpoint		
Filter blocking quickly	Defective cabin sealing	Perform pressure test procedure & seal leak points as required		
	Pre-cleaner failed	Check operation & replace if necessary		
Display blank	Poor power supply	Check mains supply fuse & correct voltage		
		Check voltage & 20AMP supply/connections at pin 1 @ monitor		
		Check earth continuity at controller pin 12		
	Failed controller	Replace monitor		
Controller showing 0.0 pressure	Fresh air filter blocked	Check filter condition & replace if required.		
Low pressure alarm	Door or window open	Ensure doors & windows securely shut		
	Cabin sealing capacity not adequate	Perform pressure test procedure & rectify cab sealing		
	Pressuriser not operating	Ensure correct voltage 12v or 24v to pressuriser motor pin A		
		Check 1.6V - 10V present at motor Pin C		
		Check 20A Supply fuse		
		Check earth continuity Pin B		
	Pressure sense tube blocked	Unplug at monitor & ensure clear flow to external of cabin		
		Ensure pressure tube fitted correct port A		
		**No need to change setpoint		
Pressuriser not working	Poor power supply	Check 20A mains fuse & correct voltage		
		Ensure adequate wire size & no voltage drop		
		Ensure correct voltage 12v or 24v to pressuriser motor pin A		
		Check 1.6V - 10V present at motor Pin C		
	Poor earth	Check earth continuity @ motor pin B		
	Motor faulty	Replace TL4M		
Access Codes:	Site Access: 7597	Factory Setup: 6759		

USER SETTINGS INSTRUCTIONS





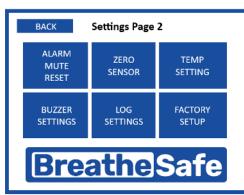

User Settings Instructions

ENTER SET UP MODE

Start-Up Screen > Main Screen > Settings Button > Settings Screen > Site Access Button > Insert Pin > Site Menu

To enter the Setup mode, press the SETTING button.


Then enter SITE ACCESS MENU. Type in 4-number pin and press ENTER.




Placing the BreatheSafe 200027 unit into Setup mode allows the adjustment of the following parameters:

Insert Pin = 7597

- Time (hours/minutes/seconds)
- Date (day/month/year)
- Pressure alarm setpoint
- Preferred cabin pressure
- Alarm delay/ intervals of alarm
- Calibration and system settings
- Resetting of the data logging
- Service reminders interval gap
- Reset current runtime between services
- CO2 settings and alarms

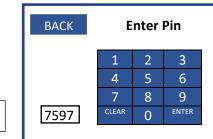

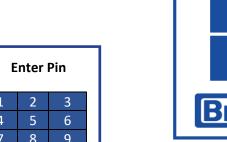


Breathe Safe Part of Alire Safe

PRESSURE SETPOINT

The pressure setpoint changes the pressure that the cabin will be maintained. INPRESS TS maintains the pre-set pressure within the cabin compared to outside.

Enter Setup mode and select ADJUST SETPOINT button. Then, use the onscreen UP and DOWN buttons to change the corresponding fields.

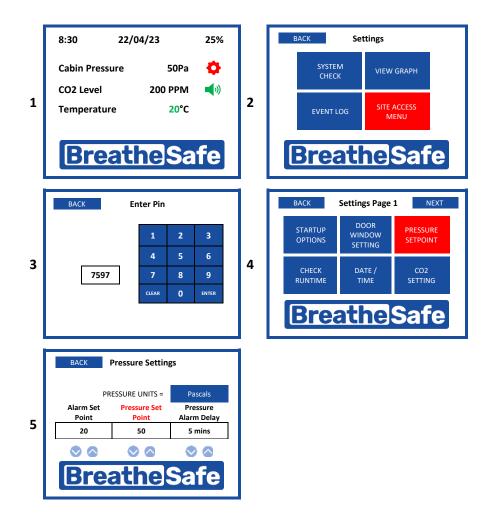


PRESSURE ALARM SETTING

USER SETTINGS INSTRUCTIONS

The mining industry benchmark for cabin pressure is 50 pascals and low-pressure is set at 20 pascals.


After a delay the alarm will activate if cabin pressure remains below the pre-set value. Enter Setup mode and select ADJUST SETPOINT button. Then, use the onscreen UP and DOWN buttons to change the corresponding fields.

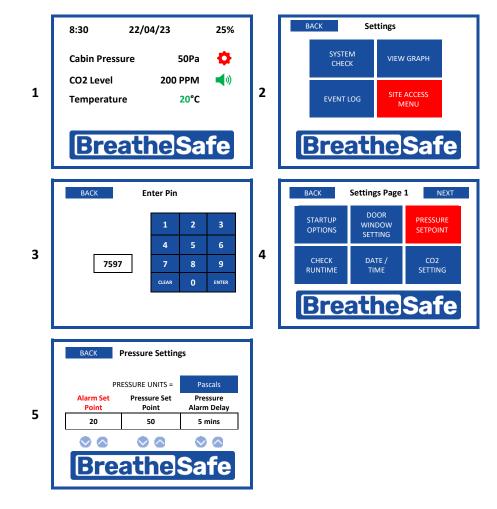

SERVICE INTERVAL

Use the onscreen UP and DOWN buttons to change the service interval setpoint.


To reset the current runtime to zero, press the RESET CURRENT RUNTIME button and enter the site access pin.

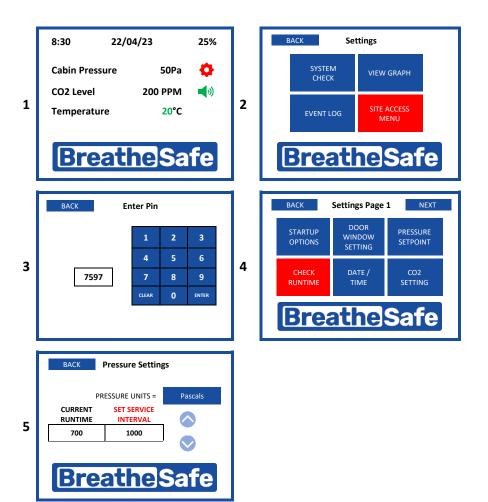

DATE & TIME SETTINGS

USER SETTINGS INSTRUCTIONS


Change the recorded date displayed and measured by the INPRESS TS.

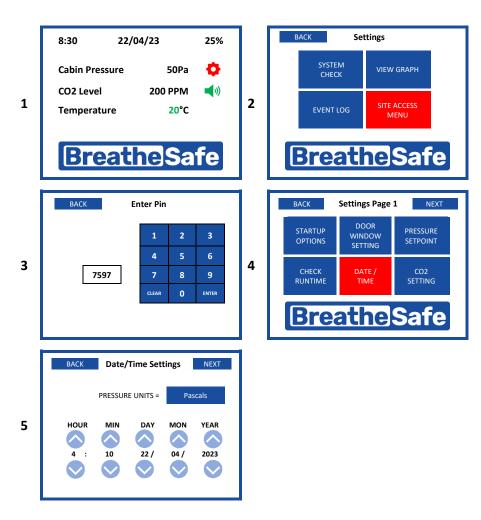



PRESSURE ALARM BUZZER SETTING


To disable the buzzer, toggle through to the ENABLED and DISABLED buttons.

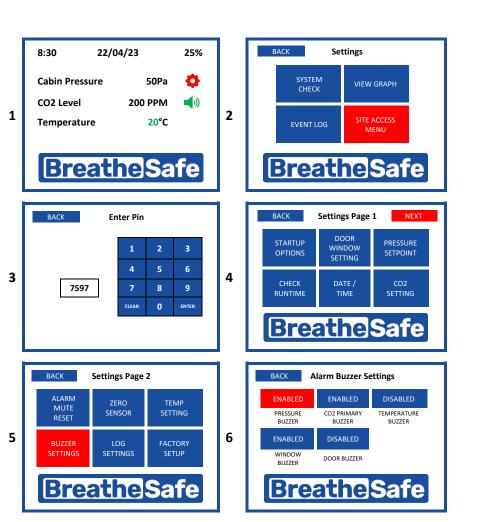

CALIBRATE ZERO SENSOR

ALARM BUZZER SETTINGS

Over long runtime, the 200027 may need recalibration. This screen allows the sensor to be recalibrated if more than 5 Pascals are out. To recalibrate, open windows and doors, turn off air conditioning, and any other device that may alter cabin pressure. Then, press the AUTO ZERO SENSOR button and leave the cabin while measuring. This process will reset the Zero Pressure.

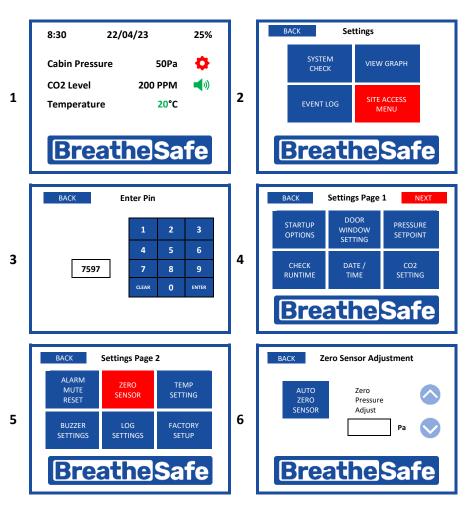


CO2 MODULE ENABLE/DISABLE


Enable or disable to CO2 module used for measuring CO2 levels within the cabin.

CO2 PRIMARY ALARM POINT

CO2 SETTINGS

The first alarm will sound when CO2 levels inside the enclosure reach this point.

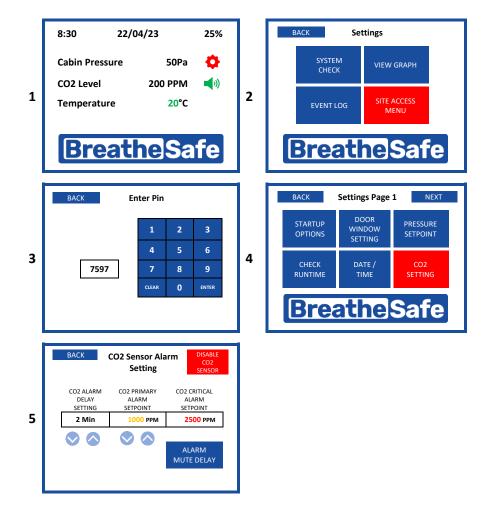


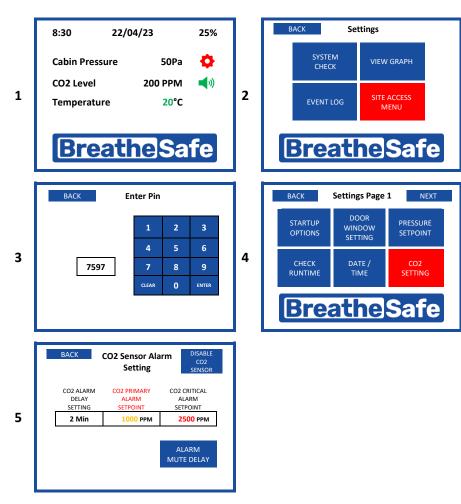



CO2 ALARM DELAY


After CO2 (concentration in ppm) within the cabin reaches the 1000 ppm setpoint, the alarm will sound after this designated amount of time. The Alarm Delay adjusts the time between the INPRESS TS measuring CO2 concentration and sounding the alarm. Use the onscreen ADJUST buttons to change the corresponding fields. For example, press to toggle through Disabled / 1 - 10 minutes.

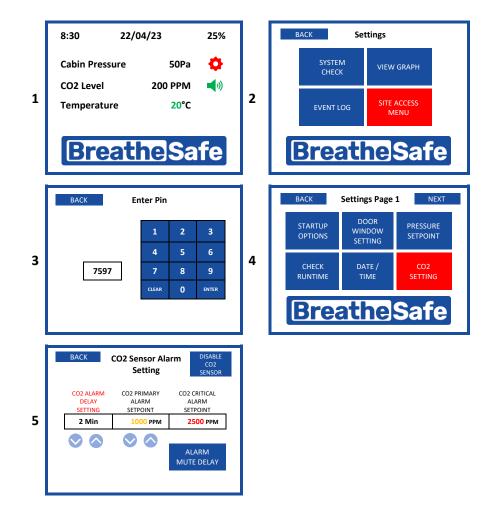

CO2 CRITICAL ALARM MUTE RESET

CO2 SETTINGS

The critical alarm is set at 2500 PPM and cannot be changed. The mute delay, however, can be configured.

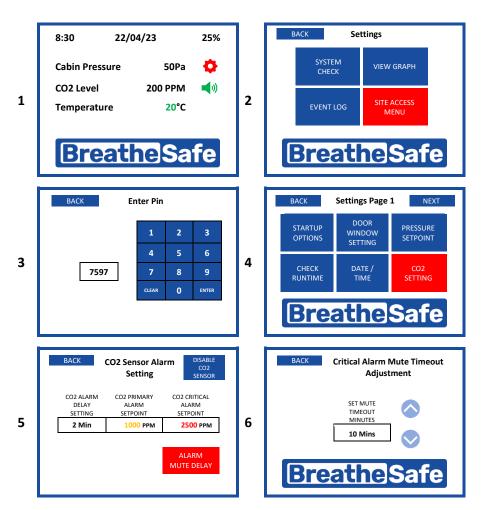

Data Download – Setting up RS232 Connection



				×
OTCP/IP	Host:			8
	Service:	- History - Teinet	TCP port#: 23	
		55H	55H version: 55H2	
		Other	IP version: AUTO	
* Serial	Port:	COM3: Stan	dard Serial over Bluetoot	n1~
	ОК	COM5: Stan COM6: Stan COM6: Stan COM8: Stan COM8: Stan COM8: Stan COM10: Sta COM11: Sta COM12: Sta COM15: Sta COM15: Sta COM15: Sta COM17: Sta COM17: Sta COM17: Sta	dard Serial over Bluetoot dard Serial over Bluetoot dard Serial over Bluetoot dard Serial over Bluetoot dard Serial over Bluetoot andard Serial over Bluetoo ndard Serial over Bluetoo	h link (C) h link (C) h link (C) h link (C) h link (C) h link (C) th link (C)

1 Plug the RS232/USB adaptor into a free USB port on your computer

2 Open up TeraTerm software.

(*TeraTerm* is an open-source software tool and easily accessible via online search)


Use the following settings in TeraTerm: Serial and choose the correct port connection

Hint:

3

Click on the COMxx Port with the "USB serial Port" connection from the dropdown menu.


Example: COM 21 This connection may be different on your computer.

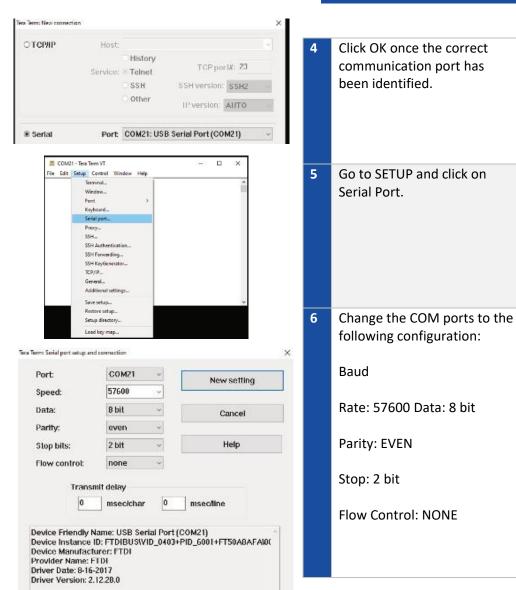

DATA DOWNLOAD

Breathe Safe Part of Alle Safe

Data Download – Setting up RS232 Connection

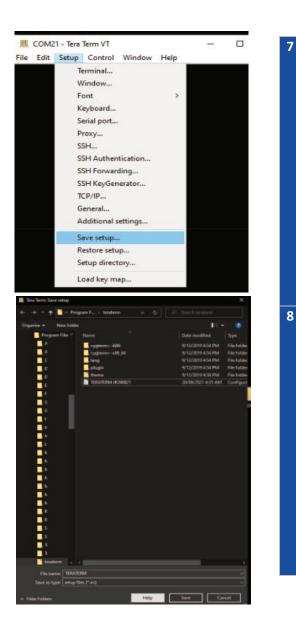


If required, you may choose to save the COM port settings. Go to Settings and clock save the setup.

Hint: From the drop-down menu, click on the Save Setup.

Name the file and save it.

The next time a download is required, you may restore the setup, and the required COM PORT settings will be loaded, ready to download the data file from the 200027 unit.

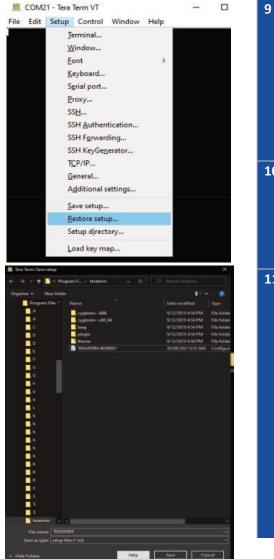

DATA DOWNLOAD

From the drop-down menu,

	click on the Save setup.
10	Click Restore setup.
11	Choose the file name you have already saved.

A B C D E F MOTOR CABIN CABIN CABIN IP (VOLT) PRESSURE PRESET ALARM		ra Term VT					×
Copy table Alt + V Paste Alt + V Paste Alt + R Clear screen Clear buffer Cancel selection Select screen Select screen Select screen Setup Control Window Help Copy table Paste Alt + V Paste Alt + R Clear buffer Cancel selection Select screen Select screen Select screen Select sc	fit Setu	p Control	Window	Help			
Paste Alt + V Paste Alt + R Clear screen Clear buffer Cancel selection Select screen Select all Select screen Select screen Select screen Select screen Alt - C Copy table Alt - C Paste Alt - V Paste Alt - R Clear buffer Cancel selection Select screen Select screen Sel	Сору		Alt+(
Peste< CR> Alt+R Clear surem Clear buffer Cancel selection Select surem Select surem Alt-C Copy table Peste Peste Alt-V Paste Alt-V<	Сору	table					
Peste< CR> Alt+R Clear surem Clear buffer Cancel selection Select surem Select surem Alt-C Copy table Peste Peste Alt-V Paste Alt-V<	Paste		Alt+	/			
Clear screen Clear buffer Cancel selection Select screen Select all Select screen Select all Select screen Select all Select all Copy table Alt-C Copy table Alt-C Clear screen Clear buffer Clear screen Select screen Select screen Select screen Select screen Select screen Clear buffer Select screen Clear buffer Select screen Clear screen Select screen Select screen Select screen Select screen Select screen Select screen Select screen Select screen Select screen Sele							
Clear buffer Cancel selection Select screen Select screen Setup Control Window Help Copy table Copy table Alt-C Copy table Alt-R Peste Alt-R Clear buffer Cancel selection Select screen Select screen Select screen	Faste	NCR2	AILT	<u>.</u>			
Cancel selection Select all Second 01-0-0 fold (01-00-02) Second 01-0-0 fold (01-02) Copy table Paste Alle-V Paste CR> Alt-R Clear screen Clear screen Select screen Select screen Select 100 Select 100-0 fold 10-00	Clear	screen					
Select screen Select all 22:011 01-0 1011 1020 201 22:21 22:21 012 0120 0120 201 22:21 - Tera Term VT — … …	Clear	buffer					
Select screen Select all 22:011 01-0 1011 1020 201 22:21 22:21 012 0120 0120 201 22:21 - Tera Term VT — … …	Conc	al calaction.		_			
Select all Copy table Paste Clear buffer Clear bu	Conc	CI JOICCIONI					
Bit III 01-0 IIII 01-0 IIIII 01-0 IIIIII 01-0 IIIIII 01-0 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Select	t screen					
21 - Tera Term VT - - × Setup Control Window Help Copy table - × Copy table Alt-C Copy table - × Paste Alt-V Alt-C Copy table - × Clear screen Alt-R Clear screen - × Clear screen Select screen - × × Stelet screen - - × × × Stelet screen - - - × × × Stelet screen - - - × × × × Stelet screen - - - - × × × × Stelet screen - - - - × ×<	Select	tall					
Copy Alt-C Copy table Peste Alt-V Paste Alt-V Paste Alt-V Paste Alt-V Paste Alt-R Clear screen Clear buffer Cancel selection Select all Screen Select all Select all Select all Select all Screen Select all Select all CABIN CABIN CABIN Screen Select all Select a	M21 - Ter	a Term VT					×
Copy:table Paste Alk-V Paste Alk-R Paste Alk-R Clear screen Alk-R Clear buffer Cancel selection Select screen Select screen Select screen Clear buffer Select screen Select screen Select screen CABIN CABIN CABIN PRE TIME OUTPUT PA PA OutPUT CABIN CABIN CABIN CABIN PA Solow P31:22 7.5 1 50 20 Solow P31:22 7.5 1 50 20 Solow P31:22 7.5 1 50 20 Solow P31:22 5.5 94 50 20 Solow 20 Solozo 20		o Control		Help			_
Paste Alk+V Paste Alk+V Paste Alk+V Paste Alk+V Paste Alk+R Clear screen Clear buffer Cancel selection Select all Screen Select all Select all Size 07.5 0001 0000 all Select all Size 07.5 0010 0000 all Size 07.5 0.20 Size 07.5 0010 0000 all Size 07.5 0.20 Size 07.5 0010 0000 all Size 07.5 0.20 Size 07.5 0000 all Size 07.5 0.20 Size 07.5 0000 all S			Alt+C				^
Paste <cr> Alt+R Clear screen Clear buffer Cancel selection Select all 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 37:20 07.5 0011 0150 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 5.5 54 50 20 20/08/2021 9:31:26 5.5 146 50 20 20/08/2021 9:31:26 5.5 146 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:33 5.4 263 50 20 20/08/2021 9:31:33 5.4 263 50 20 20/08/2021 9:31:33 5.4 263 50 20 20/08/2021 9:31:33 5.4 263 50 20</cr>	Copy	table					
A B C D E F 20/08/2021 9:31:22 7.5 2 50 20 20/08/2021 9:31:22 7.5 2 50 20 20/08/2021 9:31:22 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 7 433 50 20 20/08/2021 9:31:33 5.5	Paste		Alt+V				
Clear buffer Cancel selection Select all 32:27 Ur.5 0010 USB 201 20/08/2021 9:31:23 Cr.5 2 20/08/2021 9:31:23 T.5 1 20/08/2021 9:31:24 T 7 432 50 20/08/2021 9:31:25 C.4 20/08/2021 9:31:26 5.5 16.6 20/08/2021 9:31:27 5.8 20/08/2021 9:31:29 6.1 20/08/2021 9:31:30 5.6 20/08/2021 9:31:32 4.9 20/08/2021 9:31:32 4.9 20/08/2021 9:31:33 4.6 179 50 202 20/08/2021 9:31:35 4 20/08/2021 9:31:35 4.2 20/08/2021 9:31:35 4.2 20/08/2021 9:31:35 4.2 20/08/2021 9:31:38 7.3 </td <td>Pastes</td> <td>CR></td> <td>Alt+R</td> <td></td> <td></td> <td></td> <td></td>	Pastes	CR>	Alt+R				
Clear buffer Cancel selection Select all 32:27 Ur.5 0010 USB 201 20/08/2021 9:31:23 Cr.5 2 20/08/2021 9:31:23 T.5 1 20/08/2021 9:31:24 T 7 432 50 20/08/2021 9:31:25 C.4 20/08/2021 9:31:26 5.5 16.6 20/08/2021 9:31:27 5.8 20/08/2021 9:31:29 6.1 20/08/2021 9:31:30 5.6 20/08/2021 9:31:32 4.9 20/08/2021 9:31:32 4.9 20/08/2021 9:31:33 4.6 179 50 202 20/08/2021 9:31:35 4 20/08/2021 9:31:35 4.2 20/08/2021 9:31:35 4.2 20/08/2021 9:31:35 4.2 20/08/2021 9:31:38 7.3 </td <td>Clears</td> <td>screen</td> <td></td> <td></td> <td></td> <td></td> <td></td>	Clears	screen					
Select screen Select all 32:32 (V7.5 0017 0F30 alf (2000) 20/08/2021 9:31:23 (V7.5 017 0F30 alf (2000) 20/08/2021 9:31:24 (V7.5 017 0F30 alf (2000) 20/08/2021 9:31:24 (V7.5 016 0F30 alf (2000) 20/08/2021 9:31:25 (V7.5 016 0F30 alf (2000) 20/08/2021 9:31:26 (V7.5 016 0F30 alf (2000) 20/08/2021 9:31:27 (V7.5 016 0F30 alf (2000) 20/08/2021 9:31:30 (V7.6 016 50 alf (2000) 20/08/2021 9:31:30 (V7.6 016 50 alf (2000) 20/08/2021 9:31:33 (V7.6 016 50 alf (2000) 20/08/2021 9:31:34 (V7.6 016 200 alf (2000)	Clear I	buffer					
Select screen Select all 32:32 (V7.5 0011 0150 127 20/08/2021 9:31:23 (V7.5 1 50 200 200 20/08/2021 9:31:24 (V7.5 1 125 0 200 200 20/08/2021 9:31:25 (V7.5 1 126 50 200 200 20/08/2021 9:31:26 5.5 1186 50 200 200 20/08/2021 9:31:27 (V7.5 112 50 200 200 20/08/2021 9:31:30 5.6 1066 50 200 200 20/08/2021 9:31:32 4.9 204 50 200 200 20/08/2021 9:31:33 4.6 179 50 200 200 20/08/2021 9:31:33 4.8 2.7 223 50 200 200 20/08/2021 9:31:34 3.2 (V2.2 130 50 200 200 20/08/2021 9:31:33 4.4 149 50 200 200 20/08/2021 9:31:33 4.4 149 50 200 200 20/08/2021 9:31:33 4.4 149 50 200 200 20/08/2021 9:							
Select all 32:32 07.5 0017 0187 23 32	Cance	selection					
A C D E F 33:20 07.5 0012 0513 013 013 013 013 013 013 013 013 013 013 013 013 013 013 014 014 015 013 014							
Xi ::::::::::::::::::::::::::::::::::::	Select	screen					
A B C D E F Image: Constraint of the state	Select Select	screen all	20				
A B C D E F Image: Constraint of the state	Select Select 9:32:26 Di 9:32:27 Di	screen all -5 0001 0050	20 20				
MOTOR (VOIT) CABIN PRESSURE PA CABIN PRESSURE PA CABIN PRESSURE PA CABIN PRESSURE PA 20/08/2021 9:31:22 9:31:23 7.5 2 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 7 432 50 20 20/08/2021 9:31:25 5.4 480 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:29 6.1 444 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 138 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 201 20 20 20/08/2021 9:31:38 2.7 223 50 20 <tr< th=""><th>Select Select 9:32:26 Di 9:32:27 Di</th><th>screen all -5 0001 0050</th><th>20 20</th><th></th><th></th><th></th><th>~</th></tr<>	Select Select 9:32:26 Di 9:32:27 Di	screen all -5 0001 0050	20 20				~
THE (VOLT) OUTPUT PRESSURE PA PRESFT PA PLARM PA 20/08/2021 9:31:22 7.5 2 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 7 432 50 20 20/08/2021 9:31:25 6.4 480 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:29 6.1 444 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:33 4.3 189 50 20 20/08/2021 9:31:36 3.5 201 20 20 20 20/08/2021 9:31:36 3.1 247 50 20 20/08/20	Select Select 9:32:20 01 9:32:27 01 9:32:27 01 9:32:29 01 9:32:29 01 9:32:29 01	screen all 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050	20 20 20				~
TIME DIJIPUT PA PA 20/08/2021 9:31:22 7.5 2 50 2.0 20/08/2021 9:31:22 7.5 1 50 2.0 20/08/2021 9:31:23 7.5 1 50 2.0 20/08/2021 9:31:25 6.4 460 50 2.0 20/08/2021 9:31:25 6.4 460 50 2.0 20/08/2021 9:31:26 5.9 1.66 50 2.0 20/08/2021 9:31:28 5.5 94 50 2.0 20/08/2021 9:31:32 6.1 444 50 2.0 20/08/2021 9:31:31 5.2 1.83 50 2.0 20/08/2021 9:31:32 4.9 2.04 50 2.0 20/08/2021 9:31:33 4.6 1.79 50 2.0 20/08/2021 9:31:35 4 263 50 2.0 20/08/2021 9:31:36 3.5	Select Select 9:32:26 01 9:32:27 01 9:32:27 01 9:32:27 01 9:32:31 01	screen all 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050	an an an C				~
20/08/2021 9:31:22 7.5 2 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 7 432 50 20 20/08/2021 9:31:25 6.4 460 50 20 20/08/2021 9:31:26 5.7 1.86 50 20 20/08/2021 9:31:26 5.7 1.86 50 20 20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:	Select Select 9:32:25 01 9:32:27 01 9:32:27 01 0:32:27 01 0:32:21 01	screen all 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050 7.5 0001 0050	21 21 21 21 C MOTOR	CABIN	CABIN	CABIN UP	~
20/08/2021 9:31:23 7.5 1 50 20 20/08/2021 9:31:24 7 432 50 20 20/08/2021 9:31:25 6.4 480 50 20 20/08/2021 9:31:26 5.9 186 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 133 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021	Select Select 9:32:27 01 9:32:27 01 9:32:27 01 9:32:20 01 9:32:20 01 9:32:20 01	screen all -5 0001 0050 -5 0001 0050 -5 0001 0050 -5 0001 0050 -5 0001 0050 -8 0001 0050 -8	21 20 C MOTOR (VOLT)	CABIN PRESSURE	CABIN PRESET	CABIN LP ALARM	~
20/08/2021 9:31:24 7 432 50 20 20/08/2021 9:31:25 6.4 460 50 20 20/08/2021 9:31:26 5.9 186 50 20 20/08/2021 9:31:26 5.9 186 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:28 5.5 94 50 20 20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9	Select Select 9:32:26 01 9:32:27 01 9:32:29 01 9:32:29 07 A	SERVERN all -5 0001 0150 -5 0001 0150 -5 0001 0150 -5 0001 0150 -5 0001 0150 	C MOTOR (VOLT) OUTPUT	CABIN PRESSURE PA	CABIN PRESET PA	CABIN LP ALARM PA	~
29/08/2021 9:31:25 6.4 480 50 20 20/08/2021 9:31:26 5.9 186 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:29 6.1 444 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 201 20	Select Select 9:32:27 0 9:32:27 0 9:32:29 0 9:32:29 0 A A A TE 20/08/20	screen all -5 0001 0150 -5 0000 -5 000000 -5 0000 -5 00000 -5 00000 -5 0000 -5 00000 -5 00000 -5 00000 -5 0000 -5 0000000 -5 0000000000	C MOTOR (VOLT) OUTPUT 2 2 7.5	CABIN PRESSURE PA 2	CABIN PRESET PA 50	CABIN LP ALARM PA 20	
20/08/2021 9:31:26 5.9 186 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:27 5.8 112 50 20 20/08/2021 9:31:29 6.1 444 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 188 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:36 3.7 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021	Select Select 9:32:20 01 9:32:21 01 9:32:21 01 9:32:21 01 9:32:21 01 A A ATE 20/08/21 20/08/21	screen all -5 0001 0050 -5 0001 0050 -5 0001 0050 -5 0001 0050 -5 0001 0050 	21) 21 20 (VOLT) 0UTPUT 2 7.5 3 7.5	CABIN PRESSURE PA 2 1	CABIN PRESET PA 50 50	CABIN LP ALARM PA 20 20	1
20/08/2021 9:31:28 5.5 94 50 20 20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:34 4.3 189 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:35 3.5 201 20	Select Select 9:32:20 01 9:32:27 01 9:32:27 01 9:32:20 01 9:32:20 01 A A A A TE 20/08/21 20/08/21	screen all -5 0001 0550 -5 0001 0550 -5 0001 0550 -5 0001 0550 	C MOTOR (VOLT) OUTPUT 2 7.5 3 7.5 1 7	CABIN PRESSURE PA 2 1 432	CABIN PRESET PA 50 50	CABIN LP ALARM PA 20 20 20	
20/08/2021 9:31:29 6.1 44 50 20 20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:33 4.3 189 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021	Select Select 19:32:20 07 19:32:20 07 19:32:20 07 19:32:20 07 19:32:20 07 19:32:20 07 A A A TE 20/08/21 20/08/21 20/08/21	Screen all 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 1 011 0150 1 0100 1 0150 1 0150	C MOTOR (VOLT) OUTPUT 2 7.5 3 7.5 1 7 5 6.4	CABIN PRESSURE PA 2 1 432 480	CABIN PRESET PA 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20	
20/08/2021 9:31:30 5.6 106 50 20 20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.9 204 50 20 20/08/2021 9:31:34 4.3 169 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:40 2.6 73 50 20	Select Select 19:32:25 01 19:32:27 01 19:3	screen all 5 0001 050 5 001 050 5 000 5 00000000	C MOTOR (VOLT) OUTPUT 2 7.5 3 7.5 3 7.5 4 7 5 6.4 5 5.9	CABIN PRESSURE PA 2 1 432 480 186	CABIN PRESET PA 50 50 50 50 50 50	CABIN 1 P ALARM PA 20 20 20 20 20 20 20	
20/08/2021 9:31:31 5.2 183 50 20 20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:34 4.3 188 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 9:32:20 0 9:32:21 0 9:	screen all 	C MOTOR (VOL1) OUTPUT 2 7.5 3 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 432 480 186 112 94	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:32 4.9 204 50 20 20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:34 4.3 189 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 144 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:40 2.2 130 50 20	Select Select 9:32:30 U 9:32:31 U 9:32:31 U 9:32:31 U A A A A A C D 0/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5 0010 1050 5 0010 1050 5 0010 1050 5 0010 1050 5 0010 1050 1	C MOTOR (VOLT) OUTPUT 2 7.5 3 7.5 4 7 5 6.4 5 5.9 7 5.8 8 5.5 9 6.1	CABIN PRESSURE PA 2 1 432 480 186 112 94 44	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:33 4.6 179 50 20 20/08/2021 9:31:34 4.3 168 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 19:32:20 01 19:32:20 01 19:32:20 01 19:32:20 01 29:32:20 01 29:32:20 01 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5: 0011 0150 5: 0010 010 010 5: 0010 0100 5: 0010000000000000000000000000000000000	21 20 MOTOR (VOLT) OUTPUT 2 7.5 3 7 5 6.4 4 5 5.9 7 5.8 8 5.5 9 6.1 1 0 5.6 4 5 5.9 9 5.5 9 6 1 0 5 6 6 7 7 5 8 5 9 6 7 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 9 7 5 8 5 8 5 9 7 5 8 5 9 7 5 8 8 5 5 9 7 5 8 8 5 5 9 7 5 8 5 5 9 7 5 8 8 5 5 9 7 5 8 8 5 5 9 5 5 9 5 7 5 7 5 8 8 5 5 5 9 5 5 7 5 8 8 5 5 9 5 5 7 5 7 5 8 8 5 5 5 9 5 5 5 5 5 7 5 7 5 8 8 5 5 5 9 5 5 5 8 5 5 5 5 5 5 5 5 5 5 5 5 5	CABIN PRESSURE PA 2 1 432 480 186 112 94 44 106	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:34 4.3 169 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 19:32:20 01 19:32:20 01 19:32:20 01 19:32:20 01 20:08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5 0010 1050 5 0010 1050 5 0010 1050 5 0010 1050 5 0010 1050 7 0010 1050 1050 1000 1050 1000 10000000000	21 20 MOTOR (VOLT) 2 7.5 3 7.5 3 7.5 3 6.4 4 5.5.9 7 5.8 8 5.5 9 6.1 9 5.9 9 5.9	CABIN PRESSURE PA 2 1 1 432 480 186 112 94 44 44 106 183	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN 1P ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:35 4 263 50 20 20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:40 2.2 130 50 20	Select Select 19:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5 Old 1050 5 Old	21 20 MOTOR (VOLT) 2 7.5 3 7 5 6.41 5 5 6.41 5 6.41 5 6.41 5 6.42 6.43	САВІМ PRESSURE PA 2 1 4322 4800 1866 1122 944 444 444 4066 183 204	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	
20/08/2021 9:31:36 3.5 261 50 20 20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:49 2.2 130 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 9:32:21 02 9:32:21 02 9:32:21 02 9:32:21 02 9:32:21 02 9:32:21 02 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 	C MOTOR (VOLT) 2 7.5 3 7.5 4 7.5 5 5.9 7 5 6 6.4 5 5.9 6 6.1 5 5.2 2 4.9 4 4.6	CABIN PRESSURE PA 2 1 432 480 186 112 94 440 106 183 204 179	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:37 3.1 247 50 20 20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:39 2.4 149 50 20 20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5 0071 0150 6 0101 0150 6 0101 0150 7 0101 0100000000000000000000000000000	all MOTOR (VOL1) OUTPUT 2 7.5 5 6.4 5 5.5 9 6.1 0 5.6 1 5.2 2 4.6 1 4.6 4 4.3	CABIN PRESSURE PA 2 1 1 4322 4800 1866 1122 944 444 1006 183 204 1797 1899	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:38 2.7 223 50 20 20/08/2021 9:31:39 2.4 1.49 50 20 20/08/2021 9:31:40 2.2 1.30 50 20 20/08/2021 9:31:40 2.2 1.30 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 973220 01 973220 01 973220 01 973220 01 973220 01 973220 01 973220 01 973220 01 973220 01 973220 01 9708/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21 20/08/21	screen all 5 Old 1050 5 Old	all MOTOR (VOL1) OUTPUT 2 7.5 3 7.5 6 6.4 5 5.6 0 5.6 1 5.2 2 4.9 4 4.3 4 4.3 4 4.3	CABIN PRESSURE PA 2 1 4322 480 1866 1122 944 444 1066 1833 2044 1799 1899 2633	CARIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:40 2.2 130 50 20 20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 20:08/21 20:08	screen all 5 0010 0150 5 0010 0150 5 0010 0150 7 010 0100 7 010 0100 7 010 0100 7 0100000000000000000000000000000000000	21 21 21 21 21 21 21 21 22 23 24 25 26 27 28 29 20 21 25 26 27 28 29 20 20 21 22 23 244	CABIN PRESSURE PA 2 1 4322 4800 1666 1122 944 1066 183 2044 1799 169 2653 2051	CARIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CARIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
20/08/2021 9:31:41 2.6 73 50 20	Select Select 19:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 9:32:20 01 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21 20:08/21	screen all 	21 MOTOR (VOL1) OUTPUT 2 7.5 3 7 5 6.4 6 5.9 7 5.8 9 6.1 0 5.6 1 5.2 2 4.9 6 4.6 1 4.3 5 3.57 7 3.1	CABIN PRESSURE (PA) 2 1 1 4322 480 1865 1122 944 444 1066 1833 204 1797 1859 2053 2051 2051 2051 2051 2051 2051 2051 2051	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CARIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	
	Select Select (9:32:20 0) (9:32:20 0) (9:3	screen all 	21 MOTOR (VOL1) OUTPUT 2 7.5 3 7.5 4 7 5 9.61 0 5.50 6 6.4 5 5.9 7 5.88 3 5.52 2 4.9 3 4.66 4 4.33 5 4.43 5 4.43 5 4.63 3 4.63 4 3.357 7 3.11 8 2.77 9 2.42	CABIN PRESSURE PA 2 1 4322 4800 1666 1122 944 1066 1833 2044 1799 1699 2635 2051 2477 2473 2473 2474 2474 2475	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CARIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	
	Select Select (9/32:22 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32:27 0) (9/32) (20/08/2 (20/08/2 (20/08/2)	screen all 	21 MOTOR (VOL1) OUTPUT 2 7.5 3 7.7 5 6.4 5 5.9 7 5.8 8 5.5 9 6.4 1 4.3 5 4.9 9 4.6 3 3.5 7 3.11 3 2.7 9 2.4 9 2.4 9 2.4	CABIN PRESSURE PA 2 1 1 432 432 480 186 112 94 444 106 188 204 179 9 189 263 261 247 247 223 494 130	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CARIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	

20/08/2021

9:31:43

1.6

Data Download – Setting up RS232 Connection

From the drop-down menu, .2 click on the Edit menu function. Press "Select All". Select "Copy table". Open a blank excel document and click on the page. Then, right-click to paste the copied table. Fields are: Date, time, motor (volts) output, cabin pressure (Pa), cabin pressure pre-set (Pa), low cabin pressure alarm (Pa).

Excel Data Instructions – Unformatted

DATA DOWNLOAD

Open an Excel sheet and select the first cell A-1. Next, press and hold down the CTRL button on your keyboard and then press the letter V on the keyboard.

This procedure will paste the copied data onto that Excel sheet. Once that data has been pasted onto the Excel sheet, click on 'DATA' on the pull-down menu, followed by 'Text to Columns'. Next, select 'Delimited' on the newly opened window and click on Next.

Only select the 'Comma' button in the next window and then click 'Finish'. Then, the Excel fields will update such that each piece of data is placed in the correct columns.

The data is now ready for archiving.

Data Logging Formats

BU No: xxxxxx (the device number unique to each unit and used for identification - format = 000000)

Time: [09:25]

Date: [25/07/12]

Pressure: 32 (Pascals) as an example.

	Alarm Type
0	= No alarm
1	= Low-pressure alarm
2	= Window open
3	= Door open

INPRESS TL WARRANTY

Express Warranty

All BreatheSafe products carry a warranty against defects in materials or workmanship, provided the defects are not from factors outside of BreatheSafe's control (including neglect, lack of maintenance, improper installation or operation, unauthorized servicing repair, etc.). BreatheSafe will replace goods defected in material or workmanship at our Queensland factory or designated branch*. All parts deemed as failed or faulty must be returned to BreatheSafe for evaluation unless otherwise stated in writing.

Note- Systems must be installed and commissioned as per BreatheSafe installation and commissioning instructions. Once commissioned, the online commissioning sheet must be filled in, extending the components warranty as below. In addition, the system must be serviced and maintained correctly and by trained and qualified personnel. This requisite includes BreatheSafe technicians, qualified automotive air-conditioning technicians, or qualified auto electricians.

Warranty period – Standard

- 1 year or 10,000 hours (whichever occurs first).
- Controllers 1 year no extended warranty option.
- Warranty Period Extension when commissioning documents are registered online within 28 days of installation
- Extended warranty** only offered if commissioning maximum pressure test reaches at least 250Pa.
- Brushless motor fixed speed two years, or 10,000 hours (whichever occurs first).
- Variable speed brushless motor 15,000 hours, or 3 years** (whichever occurs first).

Must be supplied with a variable speed pressure controller, data download required for 3-year warranty option. Link to online Commissioning and Extended Warranty Registration form https://www.breathe-safe.com.au/commission/

What is not covered under Express Warranty?

- Failures are due to incorrect application.
- Damage resulting from neglect, misuse, lack of maintenance, improper installation, or operation, inappropriate or abnormal use, accidental or unauthorized servicing repair.
- Failures are due to parts not being sold or approved by BreatheSafe.
- Failures arising from any other cause that is not directly related to a defect in material or workmanship.

This Express Warranty is VOID if the product is altered, modified, or used in the manner it was not designed for, also including unauthorized repairs, or using maintenance and repair parts other than those supplied by BreatheSafe.

BreatheSafe responsibilities

If there is a defect in material or workmanship not caused by the excluded failures during the warranty period, BreatheSafe will either replace the defective goods at our Queensland factory, or designated branch. *

Alternatively, BreatheSafe may elect to provide new replacement parts, BreatheSafe approved repair parts or assembled components needed to repair the defect. BreatheSafe reserves the right to provide a refund of the purchase price in lieu of replacement or repair at BreatheSafe's discretion. The replacement or repaired product will be sent to you freight prepaid by the customer or made available for pick-up on site.

Users Responsibilities

The customer should ensure that the system is maintained according to BreatheSafe service requirements and only authorized parts must be used to service and maintain BreatheSafe systems. In the event of a suspected warranty claim, BreatheSafe should be contacted in the first instance to arrange the repair or to assist with diagnosis. Claims should be made within one week of the repair.

After contacting BreatheSafe, you may be required to deliver or send the parts to BreatheSafe's Queensland factory or designated branch. * Link to online Warranty claim form https://www.breathe-safe.com.au/warranty/

Exclusion and Limitations on Damages and Remedies

This warranty is provided in lieu of all other warranties, written or oral, whether expressed by affirmation, promise, description, drawing, model, or sample. To the extent allowed by law, all warranties other than this warranty, whether express or implied, including implied warranties of fitness for a particular purpose, are disclaimed. The maximum liability of BreatheSafe under this warranty shall not exceed the original purchase price of the product. Interference with the equipment by or abuse, or by operating the equipment at ambient temperatures or with electrical power characteristics outside the ranges indicated in our specification shall be excluded from this warranty, as shall consequential damages.

Excluded from any express warranty are costs incurred in relation to service outside our factory our designated service branch, including traveling time, waiting time, transport costs, mechanical and overtime payments required. As per Australian Consumer Law: You are entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done, you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service.

*This express warranty gives you specific legal rights, and you may also have other rights that vary from country to country.