Kit Part Number: 700075

Breathe Safe Part of Aire Safe

Parts and Service Manual

JCB 409ZX LOADER

HEPA H14 Variable Speed Pressuriser | INPRESS TS Cabin Display with CO2 Sensor | HEPA Return Air Filter + Activated Carbon

- +61 7 3276 7833
- www.breathe-safe.com.au
- ≥ sales@breathe-safe.com
- 62 Mica Street, Carole Park, 4300, QLD

Controlled Document: M0203 Issue Date: 12/10/23 Revision: 1

INSTALLATION

INSTALLATION OVERVIEW		
Manufacturer	JCB	
Туре	Loader	
Model	409ZX	
Cabin Pressure Max		
Set Auto Cabin Pressure		





HEPA H14 Variable Speed Pressuriser



INPRESS TS Cabin Display with Data Recorder



HEPA Return Air Filter

CONTENTS

Installation 1
Safety 2
Critical Parts & Maintenance Schedule3
Operator Guide4
Specifications - Pressuriser5
Parts List6-14
Technical Details 15-16
Smoke Emitter Cabin Pressure Leak
Test 17
Test 17
Test 17 Cabin Sealing Test Pressure 18
Test 17 Cabin Sealing Test Pressure 18 Commissioning Procedures 19
Test 17 Cabin Sealing Test Pressure 18 Commissioning Procedures 19 Troubleshooting Guide 20
Test 17 Cabin Sealing Test Pressure 18 Commissioning Procedures 19 Troubleshooting Guide 20 User Settings Instructions 21-26

SAFETY



THE PRESSURISATION SYSTEM DESCRIBED IN THIS MANUAL HAS THE FOLLOWING AREAS WHICH MAY BE DANGEROUS IF NOT TREATED WITH GREAT CARE.

QUALIFIED STAFF MUST WEAR THE CORRECT PERSONAL PROTECTIVE EQUIPMENT WHEN CLEANING AND SERVICING THIS UNIT DUE TO DUST AND FIBRES WHICH MAY BE CAUGHT BY THE STAGES OF AIR FILTRATION DURING NORMAL UNIT OPERATION.

THE ELECTRICAL POWER SYSTEM IS SUPPLIED BY 12V DC OR 24V DC AND NO WORK SHOULD BE CARRIED OUT ON THE PRESSURISER SYSTEM WITHOUT THE CORRECT SAFE WORK PROCEDURES AND ELECTRICAL SAFETY MEASURES BEING TAKEN, AND ALL RELEVANT CIRCUIT BREAKER OPENED TO ISOLATE THE CIRCUIT.

THE AIR FILTRATION SYSTEM MAY HAVE SEVERAL TYPES OF HIGH-SPEED ROTATING EQUIPMENT INSTALLED WITH VERY SHARP EDGES. ENSURE ALL SAFETY GUARD ARE IN PLACE WHILE THE SYSTEM IS RUNNING.

Please be aware that HEPA filters cannot be cleaned and must be replaced at the end of their lifecycle or if filter media has been damaged.



Particulate Behaviour

This is the length of time it takes for a particle to drop from a height of 1.5m in **STILL** air.

20µm	10µm	5µm	2µm	1µm	0.5µm
3.6 mins	8.3 mins	35.7 mins	2.8 hrs	12 hrs	41.7 hrs
			0	0	•

Warehouses and workshops do not have still air, so hazardous airborne particulates may remain in air for longer, increasing chance for workers to breathe in dust. Ensure PPE is worn when installing this system.



CRITICAL PARTS & MAINTENANCE SCHEDULE

Maintenance Schedule

The following tables show our suggested maintenance schedule for all units. Please note that site conditions may alter this. Excludes high corrosion environments.

Data download is required to claim the 3-year warranty on Brushless Blower Motor.

Inspect every 500 Hours and replace when filter is full*

Component / System	Action Required
Turbo Pre-cleaner	Check operation of the Turbo Pre- Cleaner.
Pressuriser Blower	Ensure blower is operational.
HEPA Primary Filter p/n: 500000	Inspect filter capacity indicator. Replace HEPA filter when 80% or greater. Vacuum out housing before replacing the filter elements.
HEPA Return Air Filter P/N: 500016	Vacuum inside cabin floor before replacing filter.
Filter Frame Assembly, Mounts, Seals and Filter Housing	Check door seals, all bolts, screws, and all mounts are secure. Check the filter canister & ensure it is correctly fitted. Check latches are operational and in good order. Replace / Re-tension fixtures and fittings required.

15,000 Hours / 36 months*

Component / System	Action Required
500 Hour Inspection	All 500-hour inspection actions.
Pressuriser's Blower 200002	Replace BRUSHLESS Pressuriser blower.

	Critical Parts				
Item	Part Number	Qty.	Description	Service Interval	
1	500000	1	Fresh Air HEPA H14 Filter (Tested as per EN1822)	1000* Hours (>80% fan capacity)	
2	500016	1	HEPA Return Air Filter	500* Hours	
3	200002	1	Brushless Blower Motor – 24V	15,000 Hours	
4	200027	1	BreatheSafe Digital Display – Data Recorder (INPRESS TS)		
5	500069	1	Filter Activated Carbon		

*Filter service hours are subject to cab sealing efficiency, site conditions and correct system use.

Suggested Schedule Servicing*



Fan Capacity Indicator

The filter is serviceable if the motor capacity is between 10% & 80%. We recommend that the filter is changed if the capacity is over 80%.

*Site dependent

OPERATOR GUIDE

	OPERATORS CHECKLIST				
	PRE-START				
1.	Visually inspect the BreatheSafe system for any damage.				
2.	Visually inspect the cabin for any damage to doors, windows, seals.				
3.	3. Please remove dust & debris from shoes and clothes before entering the cabin.				
4.	Ensure door(s) and windows are closed correctly.				
5.	Start engine and turn HVAC on to speed 2 (medium speed).				
6.	6. After fixed speed delay, the BreatheSafe display will show 50 Pascals or pre-set value.				
	The system is working correctly when the pascal value is green.				
	>> There is no further action required <<				

NORMAL OPERATING CONDITION

Cab Air Conditioning

BreatheSafe recommends OEM air conditioning fan is set at mid speed or greater to circulate air around the breathing zone and minimise CO₂.

Acceptable operating range for BreatheSafe fan 10-80%. >80% recommend maintenance.

ALERTS

Fixed Fan Start Delay

• Allows the operator to carry out pre-start checks – limiting at 30% fan speed, press the red text to disable.

CO₂ Level Alert (if equipped)

• Ensure air conditioning fan is set at mid speed or greater to circulate air and minimise CO₂.

Low Pressure Alarm

- Cabin is not maintaining positive pressure check doors and windows are closed correctly.
- Refer to maintenance department to check filters and cabin sealing. Ensure filters are serviceable.

Check Filter

- Reminder to inspect or replace filter. Service hour meter requires re-set.
- Refer to maintenance department.





Specifications High-Capacity HEPA Pressuriser

Blower	: Brushless Blower P/N 200002.
Protection	: Locked Rotor Protection (Sub Zero Environments) Under Voltage, Under/Over Current & Over Temperature.
Voltage	: 24VDC.
Current Draw	: 11 amps (peak). *Note: Motor has slow start to stop excessive in-rush current.
Air Flow	: Up to 30-300 m ³ /h or 50-215 CFM.
Pre-cleaner	: Integrated VLR (Very Low Restriction). Turbo Pre-Cleaner.
Filter Element	: BreatheSafe HEPA Primary Filter (H14=99.99% MPPS) TESTED AS PER EN1822 – P/N 500000.
Plugs & Fittings	: Mining Spec. Deutsch electrical plugs as standard.
Construction	: High strength composite construction.
Serviceability	: Easy access HEPA filter with twist-lock (TL) dust cap single assembly.
Mounting	: Heavy Duty adjustable mounting brackets.
Design	: Fully designed in SolidWorks 3D CAD & Ansys Engineering Simulation Software.
FEA Testing	: Critical components FEA (Finite Element Analyst) tested in Solid Works Simulation.
CFD Testing	: CFD (Computational Fluid Dynamics) simulations in Flow Works to ensure optimum air flow through the system.

SPECIFICATIONS HIGH-CAPACITY HEPA PRESSURISER

	List of Abbreviations	
DH	Dual HEPA	
DHPR	Dual HEPA Powered Recirculation	
DHAC	Dual HEPA Activated Carbon	
DHACPR	Dual HEPA Activated Carbon Powered Recirculation	
СРМ	Cabin Pressure Monitor	
CPU	Central Processing Unit	
DB	Decibel Sensor	
DPM	Diesel Particulate Matter	
GAS	Gas Sensor	
HEPA	High-Efficiency Particulate Air Filter	
HPAFU	High Pressure Air Filtration Unit	
HRAF	HEPA Return Air Filter	
HVAC	Heating Ventilation and Air Conditioning	
MAF	Mass Air Flow	
OEM	Original Equipment Manufacturer	
PM	Particulate Mass	
RH	Relative Humidity	
TEMP	Temperature	
TS	Touch screen	
UI	User Interface	
VMS	Vehicle Monitoring System	
VS	Vibration Sensor	
OGSP	OnGuard Sensor Pod	
CO2s	CO2 Sensor INPRESS TS	

Breathe	Safe
Part of	Aire Safe

Item No.	Qty.	Description	Part No.
1	1	Pre-cleaner Hood & Rotor Assy	200004
2	4	Pre-cleaner Injector Ring	200005
3	1	TL Fan Blade (inc. in #7)	200006
4	1	TL Nose Cone / Pre-cleaner	200007
5	1	TL Motor Housing	200008
6	1	TL Filter Housing	200009
7	1	24v DC Brushless VSD Motor & TL Fan Blade	200002
8	1	O Ring Seal Kit 2 Parts	200010
9	1	Included in 8	200011
10	1	Wiring Sleeve	200012
11	1	HEPA H14 Filter	500000
12	3	M6 Nyloc Nut	300218 (M6NYL)
13	3	M6 x 55mm Hex Bolt	300982 (M655B)
14	4	M8 x 190 Hex Bolt	301136 (M8190B)
15	8	M8 x 22mm O/D HD Washer	300230 (M8222HTW)
16	4	M8 Nyloc Nut	300249 (M8NYL)
17	5	M4 x 75mm Pan Head Phillips Screw	300162 (M475PBH)

PARTS LIST – TL4 24V DC PRESSURISER UNIT


PRESSURISER ASSEMBLY No: 200000





Item No.	Part No.	Rev	Description	Qty	Colour	Group
1	100062A01	0	Pressuriser Assembly	1	(Per Assy)	Assembly
2	100062F01	0	Inlet Assembly	1	Charcoal Grey MX83-682	Weld Assy
3	100062F02	0	Fresh Air Door Plate Assembly	1	Charcoal Grey MX83-682	Weld Assy
4	100062M01	0	Monitor Assembly	1	Charcoal Grey MX83-682	Assembly
5	100062P01	0	Pipework Module	1	Charcoal Grey MX83-682	Assembly
6	100062R01	0	Return Air Assembly	1	(Per Dwgs)	Assembly

Kit Part Number: 700075

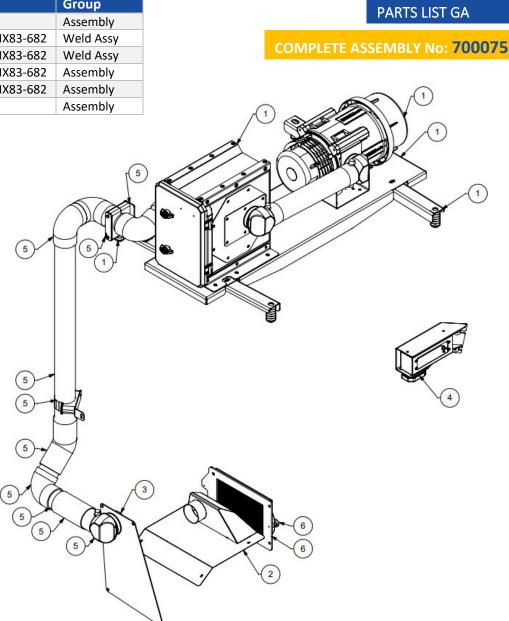


Breathe Safe

Part of Aire Safe

Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062A02	0	SO2 Assembly	1	-	-	(Per Assy)	Assembly
2	100062A03	0	Machined Spacer	2	-	-	Charcoal Grey MX83-682	Weld Assy
3	100062A04	0	SO2 Rail Assembly	1	-	-	Charcoal Grey MX83-682	Weld Assy
4	100062F05	0	SO2 Rail Assy	1	-	-	Charcoal Grey MX83-682	Weld Assy
5	100062F06	0	SO2 Mount Plate Assy	1	-	-	Charcoal Grey MX83-682	Weld Assy
6	100062-A736	0	SO2 Angle Mount	1	-	-	Charcoal Grey MX83-682	Part
7	100062-A737	0	SO2 Mount Angle	1	-	-	Charcoal Grey MX83-682	Part
8	200000	[*]	24V DC TL Unit	1	-	-	-	Stock Item
9	ST100008	[*]	TL Mount Brkt H	1	-	-	Charcoal Grey MX83-682	Stock Item


PARTS LIST – PRESSURISER MODULE

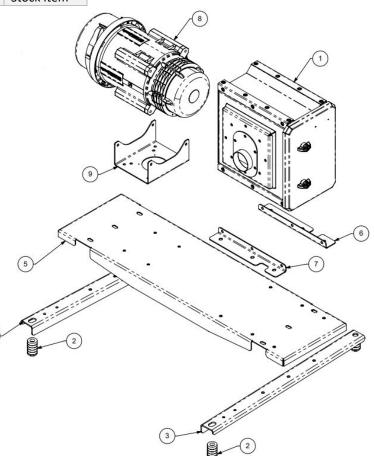

Breathe	Safe
Part of	Aire Safe


Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062-F729	0	Inlet Mounting Plate	1	Zan	1.6	(Per Assy)	Part
2	100062-F730	0	Fresh Air Inlet	1	Zan	1.6	(Per Assy)	Part
3	300388-0400	-	76.3 x 1.6 @40mm	1	Stainless Steel	Ø3.0"ODx1.6W/T	(Per Assy)	-

PARTS LIST – INLET MODULE

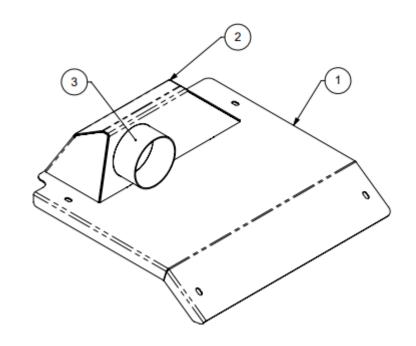


Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062-F738	0	Fresh Air Inlet Door Plate	1	Mild Steel	3	(Per Assy)	Part
2	300388-0060	-	76.3 x 1.6 @60mm	1	Stainless Steel	Ø3.0"ODx1.6W/T	(Per Assy)	-

PARTS LIST – FRESH AIR MODULE

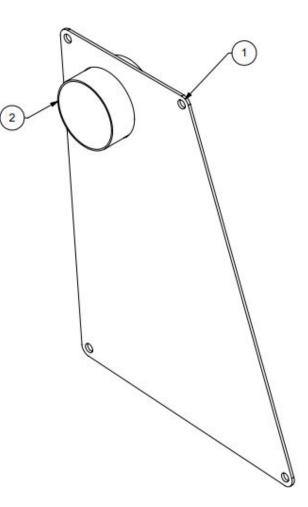

Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062M02	0	Monitor Mount Assy	1	(Prt Dwgs)	(Prt Dwgs)	Charcoal Grey MX83-682	Weld Assy
2	100062M03	0	Clamp Plate Assy	1	(Prt Dwgs)	(Prt Dwgs)	Charcoal Grey MX83-682	Weld Assy
3	100062-M730	0	Spacer	2	Mild Steel	3	Charcoal Grey MX83-682	Part
4	250100	[*]	Controller Box Small	1	-	-	(Per Assy Colour)	Stock Item
5	200031	[*]	INPRESS CO2 Sensor	1	-	-	-	Stock Item


PARTS LIST – MONITOR MODULE

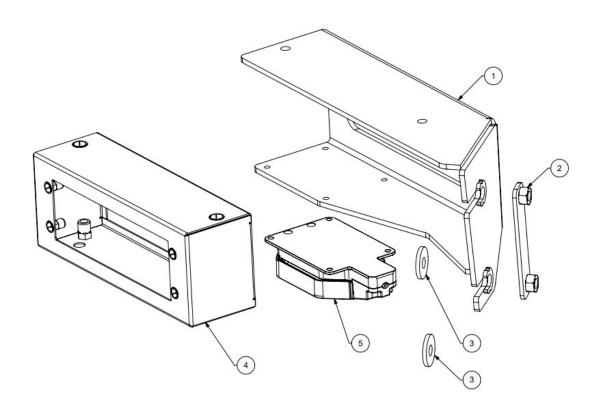

Breathe	Safe
Part of	f Aire Safe

Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062-P02	0	Stauff Ring Clamp Assy	1	(Per Assy)	-	-	-
2	100062-P751	0	Stauff Mounting Bracket	1	Mild Steel	-	-	-
3	100062-P752	0	Stauff Upper Mount Bracket	1	Mild Steel	-	-	-
4	300848	N/A	3 Inch Cobra Neck	3	-	-	-	-
5	300388-0400	-	76.3 x 1.6 @400mm	1	Stainless Steel	-	-	-
6	200308	0	3" – 90Deg Short Elbow	2	Silicone	-	-	-
7	200308	0	3" – 90Deg Short Elbow	3	Silicone	-	-	-
8	300388-0140	-	76.3 x 1.6 @140mm	1	Stainless Steel	-	-	-
9	300388-0870	0	76.3 x 1.6 @870mm	1	Stainless Steel	-	-	-
10	200305	0	3" – 45Deg Long Elbow	1	Silicone	-	-	-
11	300480	N/A	3" Stauff Clamp	1	-	-	-	-
12	776.1-PA-DP-AS-M-W3	-	Stauff – 3" Clamp Assy	1	PA Type 6	-	-	-
13	300388-0060	-	76.3 x 1.6 @60mm	4	Stainless Steel	-	-	-
14	300851	-	3" Hose	1	Silicon	-	-	-

PARTS LIST – PIPEWORK MODULE

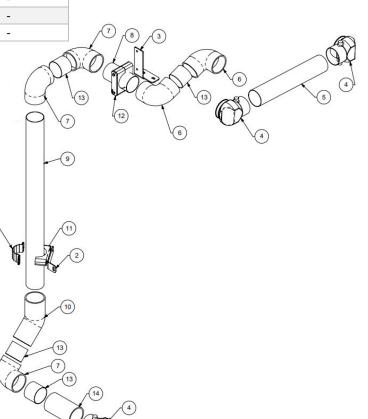

(1)

PARTS LIST – RETURN AIR MODULE

Item No.	Part No.	Rev	Description	Qty	Material	Thickness	Colour	Category
1	100062R02	0	Return Air Base Assy	1	-	-	Charcoal Grey MX83-682	Weld Assy
2	100062R03	0	R.A.F. Frame Assy	1	-	-	Charcoal Grey MX83-682	Weld Assy
3	500016	[*]	HEPA Filter 285x165x31	1	-	-	N/A	Stock Item
4	300813	-	M6 Female Scallop Knob	2	-	-	-	Hardware

0 Ø 0 Ø 2


PARTS GA


Carbon Filter Carrier Removal


- 1. Ensure all relevant circuit breakers are open and the electrical circuit is isolated.
- 2. Unlock & open the door (Fig 1)
- 3. Uncouple both filter latches (Fig 2)
- 4. Pull the filter in the opposite direction off the air flow arrows, until clear (Fig 3)
- 5. Full the filter towards you and remove (Fig 3)
- 6. Clean the filter housing of all debris.
- 7. To replace the filter, assemble the components in reverse order.


Carbon Filter Service Kit


- 1. Please follow the steps shown for the Filter Media Carrier Removal, to remove the carrier from the case.
- 2. Unscrew & remove the 4-off M5 screws (Fig 1)
- 3. Lift out the solid Media Filter (Fig 2)
- 4. Lift out the Secondary HEPA Filter (Fig 2)
- 5. Clean the filter housing of all debris.
- 6. To refit, assemble the components in reverse order.

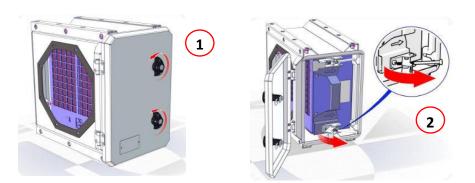


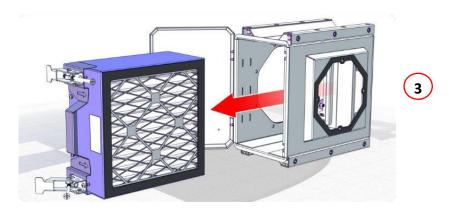

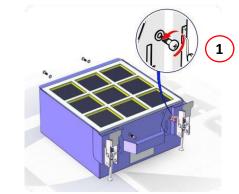






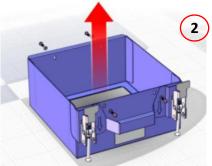


TECHNICAL DETAILS

Connections: 200027

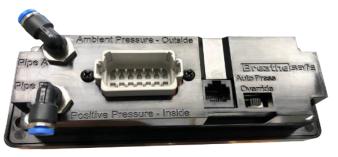


ltem	Destination
1	PIPE A – AMBIENT PRESSURE – OUTSIDE
2	PIPE B – POSITIVE PRESSURE – INSIDE
3	RJ45 CONNECTOR – CO2 SENSOR
4	OVERRIDE TOGGLE SW = MAX SPEED

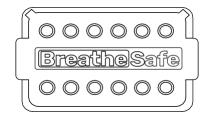

Item	Destination
1	12/24 VOLT POSITIVE SUPPLY
2	CAN H OPTION
3	CAN L OPTION
4	SERIAL TRANSMIT RS232
5	MOTOR CONTROL VOLTS OUT
6	ALARM + OUTPUT
7	TEMP SENSOR
8	NO CONNECTION
9	SERIAL RECEIVE RS232
10	DOOR INPUT (+)
11	WINDOW INPUT (+)
12	OV NEGATIVE GROUND

Wiring Diagram



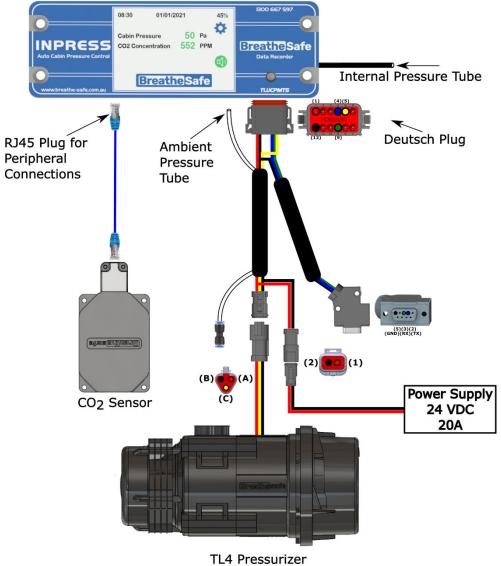

GENERAL GUIDE

G	eneral Guide to Cabin Sealing, Testing, and Commissioning of BreatheSafe variable speed Pressurisation Units (Clean Cabin with HEPA vacuum)
1	Inspect the cabin and ensure all cover panels are in place and any cabin pressure leaks are sealed with grommets, sealer, fit new door seals for used equipment, etc
2	Sitting inside the cabin with the door open, turn on the ignition to power up the unit.
3	The pressuriser fan should power up to full speed, and the monitor should indicate 0 Pa pressure (Allow ± 2 pascals wind gusts).
4	With the ignition on, close all doors and windows. If the cabin is adequately sealed, the monitor should indicate 50 Pa (Pascals), set pressure or whichever pre-set has been chosen. (If not achieved, check for cabin pressure leaks).
5	Once a cabin pressure of 50 Pa is confirmed. Go to the setting menu, select "System Check." The display will indicate "System Test - Max Fan" on the screen while showing the maximum cabin pressure.
6	The MAX cabin pressure should be above 250 Pascals related to the efficiency of cabin seals (Please note the minimum result for warranty compliance is 250 pascals tested with a new 500000 HEPA filter). Therefore, a cabin pressure result of 300 to 500 pascals is the ideal result.
7	If the above pressure is not achieved, leave the unit at full speed and investigate external leaks outside the cabin: e.g., A/C outlets, drains, window & door seals, locks & hinges, etc.
8	If necessary, with the ignition on, controller on 'MAX FAN SPEED,' A/C blower OFF & all doors & windows closed, set off a smoke emitter inside the cabin (SWP attached).
9	Locate any air leaks around the cabin and re-test. If silicone sealant or similar is used, allow it to dry before re-testing, as even slamming the door could push the seal back out.
10	Continue the sealing and testing procedure as above until a satisfactory outcome is achieved. Fill out the record below and attach photo evidence of maximum pressure result and NANOZEN Real-time Dust Monitoring result to register for warranty

Breathe Safe Part of All Safe

* Do not handle until MSDS & all safety precautions have been read and understood. Use personal protective equipment as required.

Before use, carefully read the product label. Safe work practices are advised to avoid eye or skin contact and inhalation. Observe good personal hygiene, including washing hands before eating. Prohibit eating, drinking, and smoking in contaminated areas. Avoid inhalation. Mechanical extraction ventilation is recommended when the removal of atmospheric contaminants is required. Maintain dust / fume levels below the recommended exposure standard. For small amounts, absorb with sand, vermiculite or similar and dispose of at an approved landfill site.

WARNING

For Professional Use Only – keep out of reach of children.

Do not ignite near or around flammable materials.

Use only in well-ventilated areas, outdoors, and/or with proper respiratory protection.

Persons with respiratory sensitivity should avoid exposure to any smoke.

Concentrated smoke may cause severe burns to the skin, eyes, or respiratory system.

Improper use may result in sufficient inhalation of smoke to cause respiratory tract irritation and lung damage. Harmful if swallowed.

DANGER

Use only as directed. Do not handle until all safety precautions, including Safety Data Sheet, have been read and understood. The product contains hexachloroethane. Wear protective clothing. If exposed or concerned, get medical advice. Store in a cool, dry, secure location. KEEP OUT OF REACH OF CHILDREN. Dispose of contents/container per location regulations. When used as directed, exposure should be limited and usually poses no hazard because the hexachloroethane is consumed inside the tube as smoke is produced.

Directions: (Smoke Bomb)

- 1. Ensure other workers in close proximity are informed of use. Place on a non-combustible container, away from flammable materials.
- 2. Place at Blower intake, or upwind of target area, or near centre of space.
- 3. Orient "Smoke Issues Here" toward air stream, away from surfaces. Place candle on a flame / heat resistance plate if not it will melt into the plastic surface.
- 4. Ensure smoke will not create any hazard where it is anticipated to go.
- 5. Ignite emitter inside the cabin using site approved device i.e., solder torch or 'lighter' and conduct smoke test.
- 6. Do not touch or hold smoke generator after ignition item becomes very hot & remains hot after use.

Smoke Emitter Cabin Pressure Leak Test

- 1. The pressuriser system is switched on (TEST MODE).
- 2. Hold the smoke emitter angled down.
- 3. Ignite emitter using site approved ignitor i.e., solder torch or 'lighter'.
- 4. When the product ignites, remove the lighter.
- 5. If the product flames up, blow out the flame.
- 6. Place the emitter in a non-flammable container and place it inside the cabin at floor level and close the door/windows.
- 7. Observe smoke leaks to indicate worn-out or broken seal locations. Check leakage points outside the cabin.
- 8. Do not come into contact with or inhale smoke haze.
- 9. Wait until the smoke haze **completely** disperses before re-entering the cabin. Open door to allow sufficient ventilation of smoke prior to entering cabin.

SMOKE EMITTER CABIN PRESSURE LEAK TEST


Link to MSDS: SMOKE GENERATOR TQ7621AT30S.pdf

Personal Protective Equipment (PPE)
Safety glasses must be worn at all times.
Sturdy footwear with rubber soles must be worn.
Respiratory protection devices may be required.
Gloves may be worn.
Pre-operational Safety Checks
Locate and ensure you are familiar with all machine operations and controls.
Check work area and walkways to ensure no slip/trip hazards are present.
Ensure the work area is clean and clear of any flammable material & fire extinguish device is present.
Operational Safety Checks
Ensure the machine is correctly isolated / immobilized.
Ensure the machine is correctly isolated / immobilized.
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface.
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state.
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards Falls
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards Falls Fumes
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards Falls Fumes Fire
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards Falls Fumes Fire May cause cancer sure is highly unlikely when the product is used as directed. Direct
Ensure the machine is correctly isolated / immobilized. Ensure other persons do not inhale smoke haze. Take care and do not place a lit emitter close to a flammable surface. Ending Operations and Cleaning Up Leave the work area in a safe, clean, and tidy state. Potential Hazards Falls Fumes Fire May cause cancer sure is highly unlikely when the product is used as directed. Direct ct with the product does not occur.

*This SWP does not necessarily cover all possible hazards associated with this equipment and should be used in conjunction with other references. It is designed as a guide to be used to compliment training and as a reminder to users prior to equipment use.

CABIN SEALING TEST PROCEDURE

	Cabin Sealing Efficiency Test Procedure
1	Start Engine – Pressuriser System is ON
2	Ensure all windows & door(s) are CLOSED correctly (no cabin pressure leaks) NOTE: for a new cabin with effective seals, you may need to open a window slightly before closing the door to bleed the static cabin air pressure outwards. Once door is fully closed then close windows to begin testing.
3	Enter the Settings menu via the touch screen button.
4	Select and press the System Check button to go to System Test – Max Fan.
5	Record / photograph the maximum cabin pressure achieved.

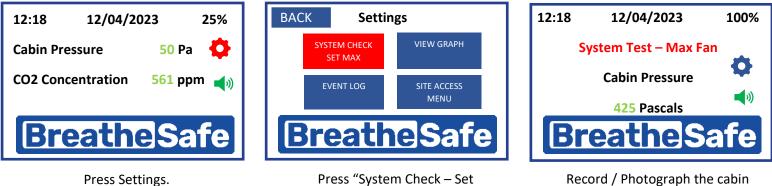

Press "System Check – Set Max" box. Record / Photograph the cabin pressure result (Max Fan Speed).

COMMISSIONING PROCEDURES - CABIN PRESSURISER

Commissioning Procedures


Follow each step of the installation guide that was supplied with the BreatheSafe kit.

Cabin sealing is an integral part of RS20 & ISO 23875; you must ensure that cabin seals are adequate for maintaining positive pressure. In addition, the site (end- user) must have the correct procedure(s) for servicing OPERATOR enclosure seals in a proactive manner rather than reactive. Items such as door and window seals must be in good working order or new seals FITTED before the BreatheSafe system installation.

Touch-screen cabin pressure display/controller Part# 200027:

*System Check Function: enter the Settings menu option and select "System Check – Set Max." The minimum BreatheSafe requirement for cabin sealing efficiency is 250 pascals; if this result is not met, it is essential to re-examine and find pressure leaks of the enclosure and apply new sealing measures.

Submission for commissioning procedure as per the diagram below:

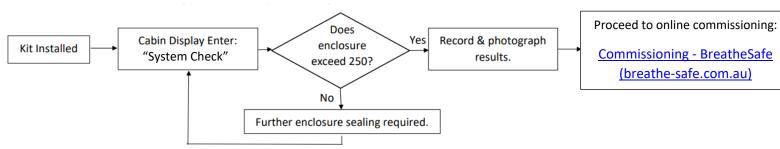

The commissioning images required are:

- ID plate / Machine Serial Number / Asset Number or Call Sign
- INPRESS TL Pressuriser location
- HEPA Return Air Filter Location Option: Powered Return Air Filter
- Cabin Pressure Display Location Including the "System Check" maximum cabin pressure result with motor output capacity %

Fill in the BreatheSafe Service Tag with the following details:

- Machine Serial Number and Installers details
- Date installed and System Check result (max cabin pressure)
- The set cabin pressure with actual pressure and motor percentage output
- Verify the 250-pascal threshold was achieved = pass OR not achieved = fail**

Please upload machine and installation details in conjunction with the required images. A Commissioning Certificate will be sent to the email address you nominate. **Extended warranty for (RS20 & ISO 23875) BreatheSafe Systems is only applicable to operator enclosures meeting






FAULT	POSSIBLE CAUSE	SOLUTION		
*ERR error code	Poor sensor connection	Remove & refit pod connection cable		
	Corrupted coding	Access factory setup - default reset - pin 6759		
*Check filter alarm	Service hour timeout	Access Check Runtime menu - reset hours via 7597 code		
Temperature / CO2 error	Sensor not connected	Fit sensor or disable via site access CO2 & or temperature menu		
Pressuriser running at full speed/noisy	Filter blocked	Service filter		
	Door or window open	Ensure doors & windows securely shut		
	Cabin sealing capacity not adequate	Perform pressure test procedure & seal leak points as required		
	Sense pipe blocked	Ensure clear & not bent		
	Internal sensor damaged	Replace controller		
		**No need to change setpoint		
Filter blocking quickly	Defective cabin sealing	Perform pressure test procedure & seal leak points as required		
	Pre-cleaner failed	Check operation & replace if necessary		
Display blank	Poor power supply	Check mains supply fuse & correct voltage		
		Check voltage & 20AMP supply/connections at pin 1 @ monitor		
		Check earth continuity at controller pin 12		
	Failed controller	Replace monitor		
Controller showing 0.0 pressure	Fresh air filter blocked	Check filter condition & replace if required.		
ow pressure alarm	Door or window open	Ensure doors & windows securely shut		
	Cabin sealing capacity not adequate	Perform pressure test procedure & rectify cab sealing		
	Pressuriser not operating	Ensure correct voltage 12v or 24v to pressuriser motor pin A		
		Check 1.6V - 10V present at motor Pin C		
		Check 20A Supply fuse		
		Check earth continuity Pin B		
	Pressure sense tube blocked	Unplug at monitor & ensure clear flow to external of cabin		
		Ensure pressure tube fitted correct port A		
		**No need to change setpoint		
Pressuriser not working	Poor power supply	Check 20A mains fuse & correct voltage		
		Ensure adequate wire size & no voltage drop		
		Ensure correct voltage 12v or 24v to pressuriser motor pin A		
		Check 1.6V - 10V present at motor Pin C		
	Poor earth	Check earth continuity @ motor pin B		
	Motor faulty	Replace TL4M		
Access Codes:	Site Access: 7597	Factory Setup: 6759		



USER SETTINGS INSTRUCTIONS





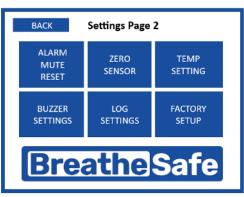

User Settings Instructions

ENTER SET UP MODE

Start-Up Screen > Main Screen > Settings Button > Settings Screen > Site Access Button > Insert Pin > Site Menu

To enter the Setup mode, press the SETTING button.


Then enter SITE ACCESS MENU. Type in 4-number pin and press ENTER.



Placing the BreatheSafe 200027 unit into Setup mode allows the adjustment of the following parameters:

Insert Pin = 7597

- Time (hours/minutes/seconds) ٠
- Date (day/month/year) .
- Pressure alarm setpoint .
- Preferred cabin pressure .
- Alarm delay/ intervals of alarm .
- Calibration and system settings ٠
- Resetting of the data logging .
- Service reminders interval gap .
- Reset current runtime between services .
- CO2 settings and alarms ٠

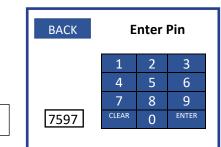




PRESSURE SETPOINT

The pressure setpoint changes the pressure that the cabin will be maintained. INPRESS TS maintains the pre-set pressure within the cabin compared to outside.

Enter Setup mode and select ADJUST SETPOINT button. Then, use the onscreen UP and DOWN buttons to change the corresponding fields.

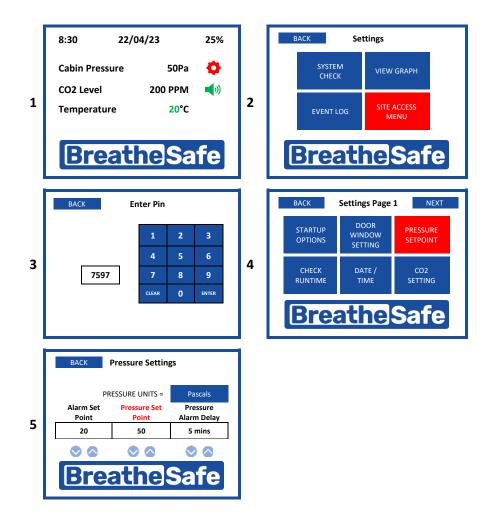


PRESSURE ALARM SETTING

USER SETTINGS INSTRUCTIONS

The mining industry benchmark for cabin pressure is 50 pascals and low-pressure is set at 20 pascals.

After a delay the alarm will activate if cabin pressure remains below the pre-set value. Enter Setup mode and select ADJUST SETPOINT button. Then, use the onscreen UP and DOWN buttons to change the corresponding fields.

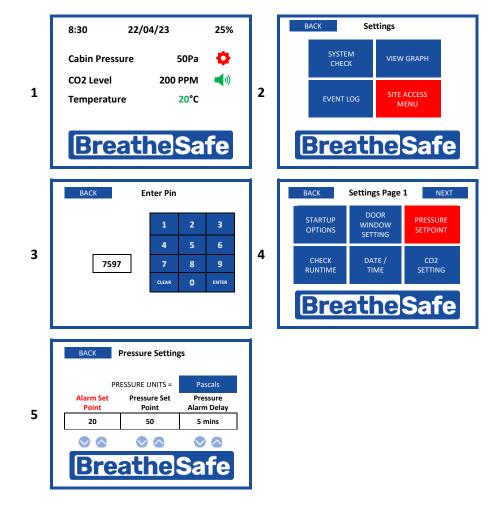




SERVICE INTERVAL

Use the onscreen UP and DOWN buttons to change the service interval setpoint.


To reset the current runtime to zero, press the RESET CURRENT RUNTIME button and enter the site access pin.

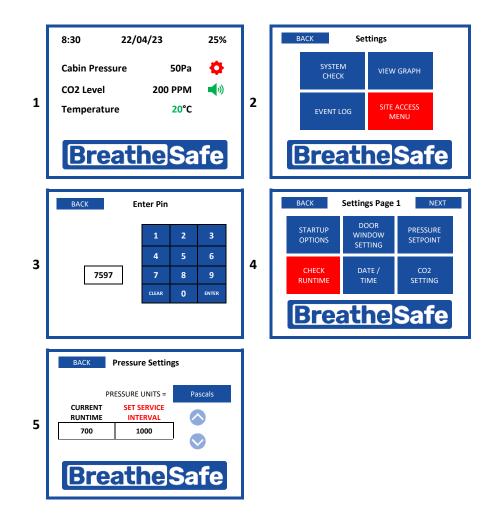

DATE & TIME SETTINGS

USER SETTINGS INSTRUCTIONS

Change the recorded date displayed and measured by the INPRESS TS.

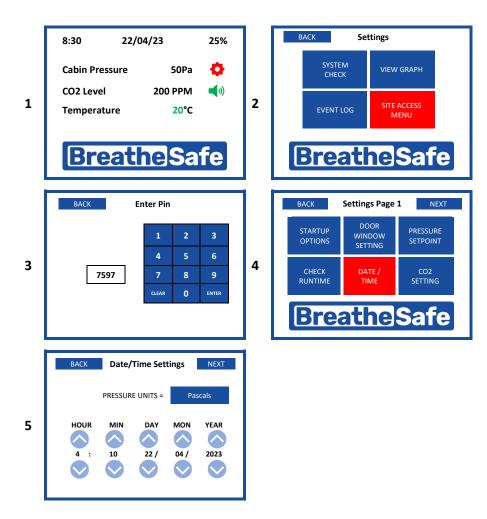






PRESSURE ALARM BUZZER SETTING


To disable the buzzer, toggle through to the ENABLED and DISABLED buttons.

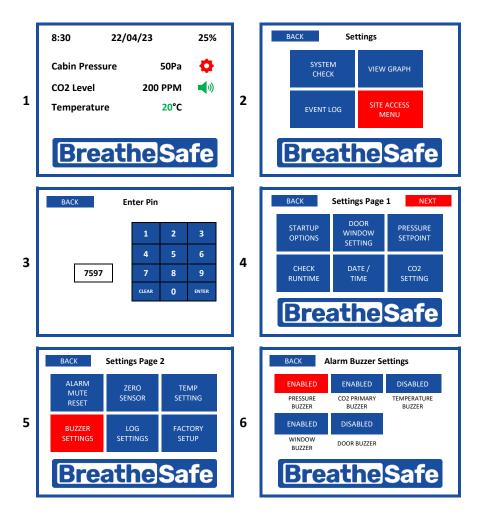

CALIBRATE ZERO SENSOR

ALARM BUZZER SETTINGS

Over long runtime, the 200027 may need recalibration. This screen allows the sensor to be recalibrated if more than 5 Pascals are out. To recalibrate, open windows and doors, turn off air conditioning, and any other device that may alter cabin pressure. Then, press the AUTO ZERO SENSOR button and leave the cabin while measuring. This process will reset the Zero Pressure.

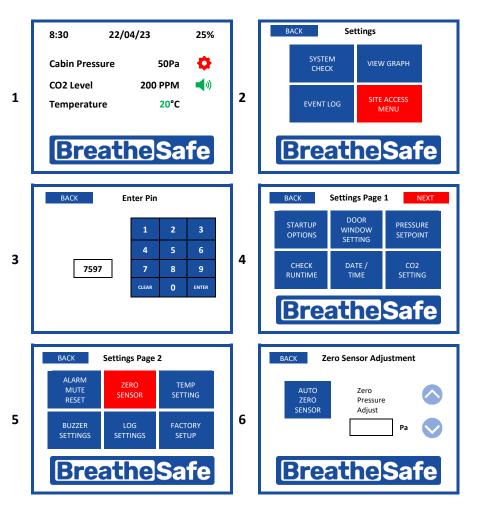




CO2 MODULE ENABLE/DISABLE


Enable or disable to CO2 module used for measuring CO2 levels within the cabin.

CO2 PRIMARY ALARM POINT

CO2 SETTINGS

The first alarm will sound when CO2 levels inside the enclosure reach this point.

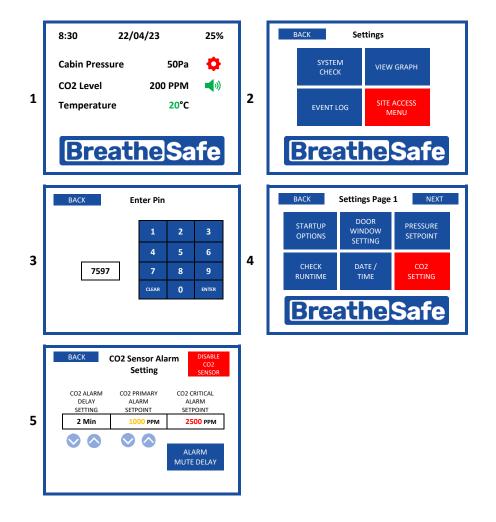


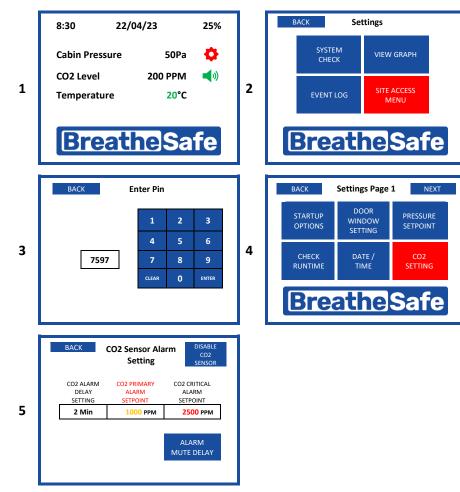



CO2 ALARM DELAY


After CO2 (concentration in ppm) within the cabin reaches the 1000 ppm setpoint, the alarm will sound after this designated amount of time. The Alarm Delay adjusts the time between the INPRESS TS measuring CO2 concentration and sounding the alarm. Use the onscreen ADJUST buttons to change the corresponding fields. For example, press to toggle through Disabled / 1 - 10 minutes.

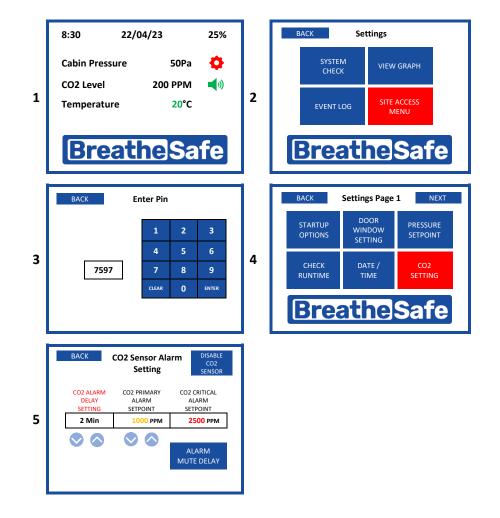

CO2 CRITICAL ALARM MUTE RESET

CO2 SETTINGS

The critical alarm is set at 2500 PPM and cannot be changed. The mute delay, however, can be configured.

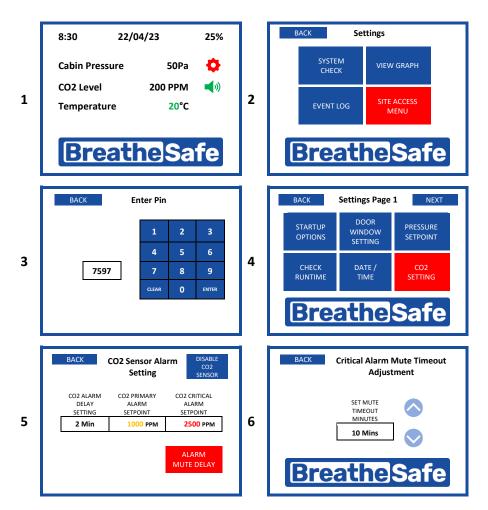



Data Download – Setting up RS232 Connection



TCP/IP	Host:				
		History			
	Service:	- Teinet	TC	P portit: 23	
		55H	SSH vers	sion: 5SH2	
		Other	IP wersi	AUTO	
B Serial	Port:	Second to the second		over Bluetool over Bluetool	and the second
	OK	COM5: Stan	dame to the state of a	and Division of	10. 10. 10. 10.
		COM6: Stan COM7: Stan COM8: Stan COM8: Stan COM10: Sta COM10: Sta COM11: Sta COM12: Sta COM15: Sta COM15: Sta COM16: Sta COM19: Sta COM19: Sta COM19: Sta COM29: Sta	dard Serial o dard Serial o dard Serial o ndard Serial ndard Serial	over Bluetool over Bluetool	th link (C th link (C th link (C th link (C th link (C th link (C th link (th link (
		COM6: Stan COM7: Stan COM9: Stan COM9: Stan COM10: Sta COM10: Sta COM12: Sta COM12: Sta COM16: Sta COM16: Sta COM16: Sta COM19: Sta COM19: Sta COM19: Sta COM20: Sta COM20: Sta	dard Serial o dard Serial o dard Serial o dard Serial ndard Serial	over Bluetool over Bluetool	th link (C th link (C) th link (C)

1 Plug the RS232/USB adaptor into a free USB port on your computer

2 Open up TeraTerm software.

(*TeraTerm* is an open-source software tool and easily accessible via online search)


Use the following settings in TeraTerm: Serial and choose the correct port connection

Hint:

3

Click on the COMxx Port with the "USB serial Port" connection from the dropdown menu.

Example: COM 21 This connection may be different on your computer.

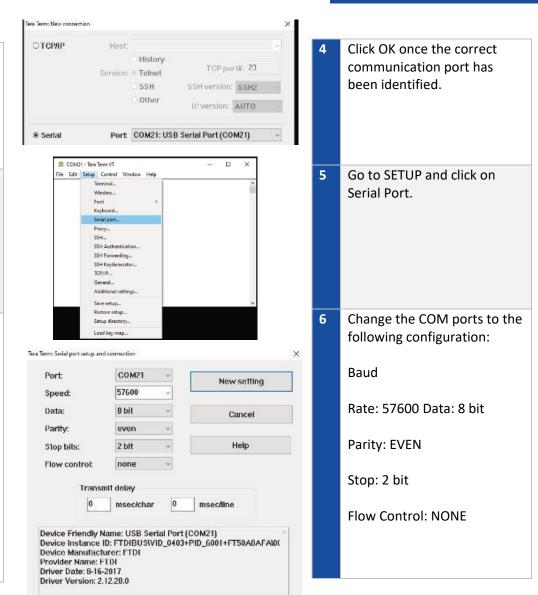


DATA DOWNLOAD



Breathe Safe Part of Air Safe

Data Download – Setting up RS232 Connection

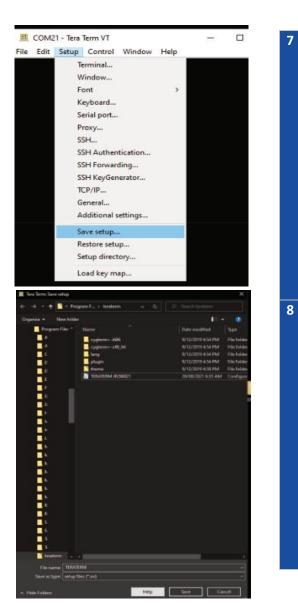


If required, you may choose to save the COM port settings. Go to Settings and clock save the setup.

Hint: From the drop-down menu, click on the Save Setup.

Name the file and save it.

The next time a download is required, you may restore the setup, and the required COM PORT settings will be loaded, ready to download the data file from the 200027 unit.

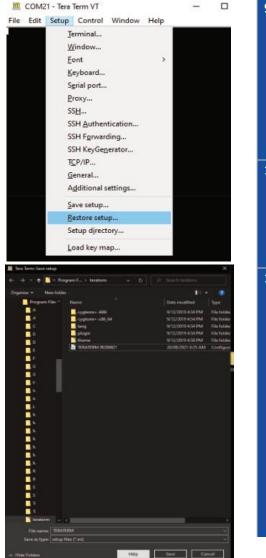

DATA DOWNLOAD

	9	From the drop-down menu, click on the Save setup.
	10	Click Restore setup.
22 Kristen Rocker Rocke	11	Choose the file name you have already saved.
		I

Data Download – Setting up RS232 Connection

man I an include	Term VT					×
Edit Setup	Control	Window	-			_
Copy		Alt+C				
Copy t	able					
Paste		Alt+	<i>i</i>			
Paste<	CR>	Alt+F	5			
Clear s	creen					
Clear b						
Ciedi D	uner		_			
Cancel	selection					
Select						
1000	Carlor Contraction		-			
Select						
09:32:00 01.	.6 0001 0050 .8 0001 0050	20				
09:32:02 02	1 0001 0050 .3 0001 0050	20 20 20 20				
09:32:01 01 09:32:02 02 09:32:03 02 09:32:03 02	.8 0001 0050 .1 0001 0050 .3 0001 0050 .5 0001 0050	20				
OM21 - Tera	Term VT			÷ 1		×
dit Setup	Control	Window	Help			
Сору		Alt+C	1			~
Copy ta	ble					
	205					
Paste	1	AR+V				
Paste<0	CR>	Alt+R				
Clear sc	reen					
Clear by	affer					
Cancel	selection					
	selection					
Select s	creen					
Select s Select a	creen II					
Select s Select a 19:32:26 07.1	creen II 5 0001 0050 5 0001 0050	au au				
Select s Select a 19:32:26 07.1	creen II 5 0001 0050 5 0001 0050	ย อบ อบ อบ				
Select s Select a	creen II 5 0001 0050 5 0001 0050	สม 20 20 21 21 21				
Select s Select a 19:32:26 07.1	creen II 5 0001 0050 5 0001 0050	20 20 20 20 20 20 20	0	E	F	
Select s Select a 19:32:26 07. 19:32:27 07. 19:32:29 07. 19:32:30 07.	creen II 5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050	an an an C MOTOR	CABIN	CABIN	CABIN UP	
Select s Select a 19:32:25 07. 09:32:27 07. 09:32:28 07. 09:32:28 07. 09:32:38 07.	Creen II 5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050 0 0001 0050 0	ai ai ai Motor (Volt)	CABIN PRESSURE	CABIN PRESET	CABIN LP ALARM	~
Select s Select a 19:32:25 07. 19:32:27 07. 19:32:27 07. 19:32:21 07. A DATE	5 0001 0050 5 0001 0050 5 0001 0050 5 0001 0050 5 0014 0050 5 0014 0050 5 0014 0050 8 0014 0050	an an an C MOTOR	CABIN	CABIN PRESET PA	CABIN UP	~
Select s Select a 9:32:25 07. 9:32:27 07. 9:32:27 07. 9:32:23 07. A DATE 20/08/202	Creen 0001:0050 5 0001:0050 5 0001:0050 5 0001:0050 5 0001:0050 0 00 0	C MOTOR (VOLT) OUTPUT 7.5	CABIN PRESSURE PA 2	CABIN PRESET PA 50	CABIN LP ALARM PA 20	~
Select s Select a 9:32:27 07. 9:32:27 07. 9:32:30 07. 9:30:30 07. 9:30:300 07. 9:30:3000000000000000000000000000000000	Creen 5 0001 0050 5 0001 0050 0014 0000 0014 0000 0014 0000 0014 0000 0014 0000 0014 0000 0014 0000 00000000000000000000000000000000	0 20 0 (VOLT) 0UTPUT 7.5 7.5	CABIN PRESSURE PA 2 1	CABIN PRESET PA 50 50	CABIN LP ALARM PA 20 20	~
Select s Select a 9:32:25 07. 9:32:27 07. 9:32:27 07. A DATE 20/08/202 20/08/202	Creen 0001 0050 5 0001 0050 5 0011 0050 5 0011 0050 5 0011 0050 0 0 1 000 0 0 0 0 0 0 0 0 0 0 0 0	20 20 20 000000 0000000 0000000 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 432	CABIN PRESET PA 50 50	CABIN LP ALARM PA 20 20 20	~
Select s Select a 9:32:20 07. 09:32:20 07. 09:32:20 07. 09:32:30 07. 09:32:30 07. A DATE 20/08/202 20/08/202 20/08/202	TIME 19:31:22 19:31:22 19:31:22 19:31:22 19:31:22 19:31:25	20 20 20 000000 0000000 0000000 7.5 7.5 7.5 7.5 7.5 7 6.4	CABIN PRESSURE PA 2 1 432 480	CABIN PRESET PA 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20	
Select = Select = 9:32:25 07. 9:32:27 07. 9:32:47 07. 9:32:47 07. A A DATE 20/08/202 20/08/202 20/08/202 20/08/202	TIME 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:24 1 9:31:24	c MOTOR (VOLT) OUTPUT 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 432 480 186	CABIN PRESET PA 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20	~
Select = Select a 99:32:29 07- 99:32:27 07- 99:32:27 07- 99:32:27 07- 99:32:29 07- 99:32:20 07- 99:32:20 07- 20/08/202 20/08/202 20/08/202 20/08/202	Image: constraint of the second sec	C MOTOR (VOLT) OUTPUT 7.5 7.5 7 6.4 5.9 5.8	CABIN PRESSURE PA 2 1 432 480 186 112	CABIN PRESET PA 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20	
Select # Select # 993222 07. 993222 07. 993222 07. 993223 07. 993223 07. 993223 07. 99322 07. 99322 07. 99322 07. 20/08/202 20/08/202 20/08/202 20/08/202	TIME 1 9 5 0011 5 0011 6 011 7 011 9 1 9 31:22 11 9:31:22 11 9:31:22 11 9:31:23 11 9:31:25 11 9:31:25 11 9:31:26 11 9:31:27 11 9:31:26	C MOTOR (VOLT) OUTPUT 7.5 7.5 7.5 7.5 7.5 7.6.4 5.9 5.8 5.5	CABIN PRESSURE PA 2 1 432 480 186 112 94	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20	
Select a Select a UP:32:20 TC UP:32:20 TC UP:32:20 TC UP:32:20 TC UP:32:20 TC DATE 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202	TIME 11 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 5 0011 0150 7 0010 0150 7 0000 7 00000 7 0000 7 00000 7 00000 7 00000 7 00000 7 00000 7 00000 7 00000 7 00000000 7 0000000000	C MOTOR (VOL1) OUTPUT 7.5 7.5 7 6.4 5.9 5.8 5.5 6.1	CABIN PRESSURE PA 2 1 432 480 186 112 94 44	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select # Select # 9132:20 07. 9132:20 07. 9132:20 07. 9132:20 07. 9132:20 07. 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202	TIME 11 13 14 14 15 14 14 15 14 14 15 15 14 15 15 15 15 15 15 15 15 15 15	C MOTOR (VOL1) OUTPUT 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 432 480 186 112 94 44	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select a Select a 993222 07. 99322 07. 99322 07. 99322 07. 2008/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202	TIME TIME TIME 1 9:31:22 1 9:31:23 1 9:31:24 1 9:31:25 1 9:31:31 1 9:31 1 9:31:31 1 9:31:31 1 9:31 1 9:31:31	C MOTOR (VOL1) OUTPUT 7.5 7.5 7 6.4 5.9 5.8 5.5 6.1	CABIN PRESSURE PA 2 1 432 480 186 112 94 44	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = District Dr. District Dr.	Image: state	C MOTOR (VOLT) 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 6.4 5.9 5.8 5.5 6.1 5.6	CABIN PRESSURE PA 2 1 432 480 186 112 94 444 440 6 183 204	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = Select = UP3222 07. UP3222 07. UP3222 07. UP3222 07. UP3222 07. 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202	TIME 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:23 11 9:31:33 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35 11 9:31:35	C MOTOR (VOLT) OUTPUT 7.5 7.5 7.5 7.5 7.6 4.4 5.9 5.8 5.5 6.1 5.6 5.2 4.9 4.6	CABIN PRESSURE PA 2 1 432 480 186 112 94 44 106 183 204 179	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select a Select a Select a 973222 07. 993222 07. 993222 07. 993222 07. 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202	TIME TIME TIME 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:25 1 9:	C MOTOR (VOLT) 0UTPUT 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 432 480 186 112 94 444 440 6 183 204	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN LP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = Select = UP3222 07. UP3222 07. UP3222 07. UP3222 07. UP3222 07. 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202 20,08/202	TIME 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:23 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:25 1 9:31:35 1 9:3	C MOTOR (VOL1) OUTPUT 7.5 7 7 6.4 5.9 5.8 5.5 6.1 5.6 5.2 4.9 4.6 4.3	CAHIN PRESSURE PA 2 1 4322 4800 1866 112 944 444 1006 183 204 1799 189	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = Sel	TIME 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:33 11 9:31:33 11 9:31:35 11 9:31:35	C MOTOR (VOI1) OUTPUT 7.5 7.5 7.5 7.5 7.5 6.4 5.9 5.8 5.5 6.1 5.6 5.2 2 4.9 4.4 4.3 4.4 3 4.4	CABIN PRESSURE PA 2 1 432 480 112 94 446 112 94 446 106 1183 204 179 189 263	CABIN PRESET PA 50 500 500 500 500 500 500 500 500 500	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = Select = UP3222 UT. UP3222 UT. UP322 UT. UP3	TIME TIME TIME 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:24 1 9:31:25 1 9:31:25 1 9:31:24 1 9:31:34 1 9:31:35 1 9:31:34 1 9:31:35 1 9:31:37 1 9:31:37 1 9:31:35 1 9:31:37 1 9:31:37 1 9:31:34 1 9:31:35 1 9:31:37 1	C MOTOR (VOLT) OUTPUT 7.5 7.5 7.5 7.5 6.1 5.9 5.8 5.5 6.1 5.6 5.2 4.9 4.6 4.3 4.3 4.3 5.5	CABIN PRESSURE PA 2 1 4322 440 1066 1122 944 1066 183 2044 1799 1659 2653 2651	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select a Select a Select a 932;22 07. 932;22 07. 932;22 07. 932;22 07. 932;22 07. 932;22 07. 20,08/202 20,	TIME 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:25 1 9:31:35 1 9:3	C MOTOR (VOL1) OUTPUT 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 4322 460 1866 1122 944 444 1066 1833 204 1799 1859 2653 2615 2477	CABIN PRESET PA 50 50 50 50 50 50 50 50 50 50 50 50 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select = Select = Sel	TIME 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:22 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:23 11 9:31:33 11 9:31:34 11 9:31:35 11 9:31:35	C MOTOR (VOL1) OUTPUT 7.5 7.5 7.5 7.6 4.4 5.6 5.6 5.6 5.6 5.2 4.9 4.6 4.3 3.1 2.7	CABIN PRESSURE PA 2 1 4020 1866 1121 944 444 1066 1838 2044 1799 2633 2011 2777 2787 2777 2783 2797 2097	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	
Select = Select = Select = UP3222 UT. UP3222 UT. UP3222 UT. UP3222 UT. UP3222 UT. UP3222 UT. UP3222 UT. 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202 20/08/202	TIME TIME TIME 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 0 31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:33 1 9:31:34 1 9:31:35 1 9:31:35	C MOTOR (VOLT) OUTPUT 7.5 7.5 7.7 6.4 5.9 5.8 5.5 6.1 5.6 5.2 4.9 4.6 4.3 4.4 4.3 3.5 3.1 2.7 2.4	CABIN PRESSURE PA 2 1 422 440 166 112 94 444 106 183 204 444 106 183 204 263 263 261 247 273 273 274 275 275 275 275 275 275 275 275	CABIN PRESET PA 500 500 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 20 20 20 20 20 20 20 20 20 20 20 20 20	
Select a Select a Select a 9132:20 (T) 9132:20 (T) 9132:20 (T) 9132:20 (T) 20132:20 (T) 20108/202 20108/20	TIME 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:22 1 9:31:23 1 9:31:23 1 9:31:24 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:25 1 9:31:24 1 9:31:35 1 9:31:32 1 9:31:32 1 9:31:33 1 9:31:32 1 9:3	C MOTOR (VOL1) OUTPUT 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5	CABIN PRESSURE PA 2 1 4322 4400 1866 1122 944 444 1066 1833 2044 1797 1889 2043 2044 1797 1889 2043 2044 1797 1899 2053 2054 2055	CABIN PRESET PA 500 500 500 500 500 500 500 50	CABIN IP ALARM PA 200 200 200 200 200 200 200 200 200 20	

12	From the drop-down menu, click on the Edit menu function.	Open a the CTR keyboa
		This pro data ha menu, f opened
13	Press "Select All".	Only se Then, tl the cor
14	Select "Copy table".	The dat Data Lo
15	Open a blank excel document and click on the page. Then, right-click to paste the copied table.	BU No: identifie Time: [(Date: [2
15	document and click on the page. Then, right-click to	identifi

Excel Data Instructions – Unformatted

DATA DOWNLOAD

in Excel sheet and select the first cell A-1. Next, press and hold down RL button on your keyboard and then press the letter V on the rd.

ocedure will paste the copied data onto that Excel sheet. Once that as been pasted onto the Excel sheet, click on 'DATA' on the pull-down followed by 'Text to Columns'. Next, select 'Delimited' on the newly window and click on Next.

elect the 'Comma' button in the next window and then click 'Finish'. he Excel fields will update such that each piece of data is placed in rect columns.

ta is now ready for archiving.

ogging Formats

xxxxxx (the device number unique to each unit and used for cation - format = 000000)

09:25]

25/07/12]

re: 32 (Pascals) as an example.

Alarm Type				
0	= No alarm			
1	= Low-pressure alarm			
2	= Window open			
3	= Door open			

INPRESS TL WARRANTY

Express Warranty

All BreatheSafe products carry a warranty against defects in materials or workmanship, provided the defects are not from factors outside of BreatheSafe's control (including neglect, lack of maintenance, improper installation or operation, unauthorized servicing repair, etc.). BreatheSafe will replace goods defected in material or workmanship at our Queensland factory or designated branch*. All parts deemed as failed or faulty must be returned to BreatheSafe for evaluation unless otherwise stated in writing.

Note- Systems must be installed and commissioned as per BreatheSafe installation and commissioning instructions. Once commissioned, the online commissioning sheet must be filled in, extending the components warranty as below. In addition, the system must be serviced and maintained correctly and by trained and qualified personnel. This requisite includes BreatheSafe technicians, qualified automotive air-conditioning technicians, or qualified auto electricians.

Warranty period – Standard

- 1 year or 10,000 hours (whichever occurs first).
- Controllers 1 year no extended warranty option.
- Warranty Period Extension when commissioning documents are registered online within 28 days of installation
- Extended warranty** only offered if commissioning maximum pressure test reaches at least 250Pa.
- Brushless motor fixed speed two years, or 10,000 hours (whichever occurs first).
- Variable speed brushless motor 15,000 hours, or 3 years** (whichever occurs first).

Must be supplied with a variable speed pressure controller, data download required for 3-year warranty option. Link to online Commissioning and Extended Warranty Registration form https://www.breathe-safe.com.au/commission/

What is not covered under Express Warranty?

- Failures are due to incorrect application.
- Damage resulting from neglect, misuse, lack of maintenance, improper installation, or operation, inappropriate or abnormal use, accidental or unauthorized servicing repair.
- Failures are due to parts not being sold or approved by BreatheSafe.
- Failures arising from any other cause that is not directly related to a defect in material or workmanship.

This Express Warranty is VOID if the product is altered, modified, or used in the manner it was not designed for, also including unauthorized repairs, or using maintenance and repair parts other than those supplied by BreatheSafe.

BreatheSafe responsibilities

If there is a defect in material or workmanship not caused by the excluded failures during the warranty period, BreatheSafe will either replace the defective goods at our Queensland factory, or designated branch. *

Alternatively, BreatheSafe may elect to provide new replacement parts, BreatheSafe approved repair parts or assembled components needed to repair the defect. BreatheSafe reserves the right to provide a refund of the purchase price in lieu of replacement or repair at BreatheSafe's discretion. The replacement or repaired product will be sent to you freight prepaid by the customer or made available for pick-up on site.

Users Responsibilities

The customer should ensure that the system is maintained according to BreatheSafe service requirements and only authorized parts must be used to service and maintain BreatheSafe systems. In the event of a suspected warranty claim, BreatheSafe should be contacted in the first instance to arrange the repair or to assist with diagnosis. Claims should be made within one week of the repair.

After contacting BreatheSafe, you may be required to deliver or send the parts to BreatheSafe's Queensland factory or designated branch. * Link to online Warranty claim form https://www.breathe-safe.com.au/warranty/

Exclusion and Limitations on Damages and Remedies

This warranty is provided in lieu of all other warranties, written or oral, whether expressed by affirmation, promise, description, drawing, model, or sample. To the extent allowed by law, all warranties other than this warranty, whether express or implied, including implied warranties of fitness for a particular purpose, are disclaimed. The maximum liability of BreatheSafe under this warranty shall not exceed the original purchase price of the product. Interference with the equipment by or abuse, or by operating the equipment at ambient temperatures or with electrical power characteristics outside the ranges indicated in our specification shall be excluded from this warranty, as shall consequential damages.

Excluded from any express warranty are costs incurred in relation to service outside our factory our designated service branch, including traveling time, waiting time, transport costs, mechanical and overtime payments required. As per Australian Consumer Law: You are entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done, you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service.

*This express warranty gives you specific legal rights, and you may also have other rights that vary from country to country.